Thank you for purchasing LS Variable Frequency Drives!

SAFETY INSTRUCTIONS

Safety instructions are prepared to use the product safely and correctly by preventing any accident or risk beforehand, so they should be always kept.

●In this manual, safety instructions are divided into two classes; each has the following meaning.



WARNING Improper operation may result in serious personal injury or death



CAUTION Improper operation may result in slight to medium personal injury or property damage

• Throughout this manual, we use the following two illustrations to make you aware of safety considerations.



identifies potential hazards under certain conditions.

identifies shock hazards under certain conditions.

- •After reading this manual, keep it handy for any user to quickly refer to
- Read this manual carefully to user SV-iE5 Series Inverter's functions appropriately and safely.

🖳 Warning

- Do not remove the cover while the power is applied or the unit is in operation. Or, it may cause electric shock.
- Do not run the inverter with the front cover removed.
- Or, it may cause an electric shock due to high voltage terminals or charged capacitor exposure.
- Do not remove the cover except for periodic inspections or wiring, even if the input power is not applied. Or, it may cause an electric shock due to charged capacitor exposure even if the power is cut off.
- •Wiring and periodic inspections should be performed at least 10 minutes after disconnecting the input power and after checking the DC link voltage is discharged with a meter(below DC 30V).

Or, it may cause an electric shock (below DC 30V)

Operate the switches with dry hands.

Or, it may cause an electric shock.

- Do not use the cable when its insulating tube is damaged.
 - Or, it may cause an electric shock.
- Do not subject the cables to any heavy load stressful to them.

Or, it may cause an electric shock due to damaged cable.

LS Industrial Systems | 1

Instructions

▲ Caution

- Install the inverter on a non-flammable surface.
 Or, it may cause a fire if being installed on or closely to a flammable material.
- Disconnect the input power if the inverter gets damaged.
- Or, it may result in a secondary accident and fire.
- After the input power is applied or removed, the inverter will remain hot for a couple of minutes. Otherwise, you get bodily injuries such as skin-burn or damage.
- Do not apply power to a damaged inverter or an inverter with parts missing even if the installation is complete. Or, it may cause an electric shock.
- Do not allow screw, metal chips, water drops, oil or other impurities into the inverter. Or, it may cause a fire.

Operating Precautions

- (1) Transport and installation
 - Carry it correctly according to the specified weight.
 - Do not stack the inverter boxes higher than recommended.
 - Install according to instruction specified in this manual.
 - Do not open the cover during transport.
 - Do not place any heavy load on the inverter.
 - •Check whether the inverter mounting direction is correct.
 - Do not drop the inverter, or subject it to impact.
 - Follow your national electrical code for grounding(200V).
 - •As soon as detaching PCB(Printed Circuit Board) for installation or repair, make sure to place it on conductor. Otherwise, it may cause destruction due to static electricity.
 - •Use the inverter under the following environmental conditions.

Environment	Ambient temperature	- 10 ~ 40 - Ceeźnog)
	Relative humidity	90% RH or less (non-condensing)
	Storage temperature	- 20 ~ 65 °C
	Environment	Free of any corrosive gas, combustible gas, oil mist or dust
	Altitude, vibration	Max. 1,000m above the sea level · 5.9m/sec2(=0.6g) or less

(2) Wiring

- Do not connect a power factor correction capacitor, surge suppressor, or RFI filter to the output of the inverter.
- The connection orientation of the output cables should be in good order of U, V, W.
- •Incorrect terminal wiring could result in the equipment damage.
- Reversing the polarity (+/-) of the terminals could damage the inverter.
- The only authorized and skilled person should perform wiring and inspections.
- Always install the inverter before wiring.

(3) Trial run

- Check all parameters during operation. Changing parameter values might be required depending on the load.
- •Always apply permissible range of voltage to the each terminal as indicated in this manual. Otherwise, it could lead to inverter damage.

(4) Operation precautions

- •Note that if the Auto restart function is selected, you must stay away from the equipment as a motor will restart suddenly after an alarm stop.
- The Stop key on the keypad is activated only when the setting has been made. Prepare an emergency stop switch separately.
- If any fault is reset with the reference signal present, a sudden start will automatically occur. Check that the reference signal is turned off in advance. Otherwise an accident could occur.
- Do not modify or alter the inverter without permission.
- Do not use a magnetic contactor on the inverter input for frequent starting/stopping of the inverter.
- •Use a noise filter to reduce the effect of electromagnetic interference. Otherwise nearby electronic equipment may be affected.
- In case of input voltage unbalance, install AC reactor. Power Factor capacitors and generators may become overheated and damaged due to potential high frequency noise transmitted from inverter.
- Before operating unit and prior to user programming, reset user parameters to default settings.
- Inverter can easily be set to high-speed operations, Verify capability of motor or machinery prior to operating unit.
- Stopping torque is not produced when using the DC-Break function. Install separate equipment when stopping torque is needed.

- (5) Fault prevention precautions
 - Provide a safety backup such as an emergency brake which will prevent the machine and equipment from hazardous conditions if the inverter fails.
- (6) Maintenance, inspection and parts replacement
 - Do not conduct a megger (insulation resistance) test on the control circuit of the inverter.
 - •Refer to Chapter 13 for periodic inspection (parts replacement).
- (7) Disposal
 - Dispose of the inverter as treating industrial waste.
- (8) General instructions
 - •Many of the diagrams and drawings in this instruction manual show the inverter without a circuit breaker, a cover or partially open. Never run the inverter like this. Always place the cover with circuit breakers and follow this instruction manual when operating the inverter.

User's Manual

- The purpose of this manual is to provide the user with the necessary information to install, program, start up and maintain the SV-iE5 series inverter.
- •To assure successful installation and operation of the SV-iE5 series inverter, the material presented must be thoroughly read and understood before proceeding
- •This manual contains...

Ch.	Title	Description
1	Basic information	Provides general information and precautions for safe use of the inverter.
	& precautions	
2	Installation	Provides instructions on how to install the SV-iG5A inverter.
3	Wiring	Provide the information on how to wire the input power and signal terminal
		strip
4	Peripheral	Describes how to connect the optional peripheral devices to the inverter.
5	Loader	Illustrates keypad features and display.
6	Basic operation	Provides instructions for quick start of the inverter.
7	Function list	Summarized table of functions.
8	Control block	Shows control flow to help users easily understand operation mode.
	diagram	
9	Basic functions	Provides information on basic functions such as frequency setup and
		operation commands.
10	Advanced	Indicates advanced functions used for system application.
	functions	
11	Monitoring	Gives information on the operating status and fault information.
12	Protective	Outlines protective functions of the motor and the inverter.
_	functions	
13	Troubleshooting	Provides information on potential troubles or abnormal situations.
	& maintenance	
14	COM options	Gives information on the inverter mounting with COM options.
15	Specifications	Gives information on Input/Output rating, control type and more details of
		the SV-iG5A inverter.

Conten	ts
--------	----

Contents

1.	Basic I	nformation & Precaution	1-1
	1.1	Important precautions	1-1
	1.2	Parts' Names & Details	1-2
	1.3	Assembling & Disassembling	1-3
2.	Installa	tion	2-1
	2.1	Installation precautions	2-1
	2.2	Dimensions	2-3
3.	Wiring.		3-1
	3.1	Control Terminal Wiring Diagram	3-1
	3.2	Power Terminal Wiring Diagram	3-1
	3.3	Grounding Spec	3-2
	3.4	Control Terminal Wiring Spec	3-3
	3.5	PNP/NPN Modes Switch	3-4
4.	Periphe	əral	4-1
	4.1	Configuration of Peripherals	4-1
	4.2	Recommended MCCB and Magnetic Contactor	4-2
	4.3	Recommended Reactors	4-2
5.	Loader		5-1
	5.1	Configuration	5-1
	5.2	Alpha-numeric view on the LED	5-2
	5.3	Moving to other groups	5-3
	5.4	How to move among codes in a group	5-4
	5.5	How to set parameters	5-7
	5.6	Monitoring Operation Status	5-9
6.	Basic C	Dperation	6-1
	6.1	Frequency Setting and Basic Operation	6-1
7.	Functio	n List	7-1
8.	Control	Block Diagram	8-1
	8.1	Control Flow	8-1
	8.2	Frequency Setting & Drive Mode Setting	8-1
	8.3	Frequency Setting, Drive Acc./Dec. Setting and V/F Voltage Control	8-2
9.	Basic F	unctions	9-1
	9.1	Frequency Setting	9-1
	9.2	Multi-Step Frequency Setting	9-4
	9.3	Operating command setting method	9-5
	9.4	Accel/Decel time and pattern setting	9-8

٦

9.5	V/F Control	
9.6	Stop method select	9-14
9.7	Frequency limit	
10. Adva	nced Functions	10-1
10.1	DC Brake	10-1
10.2	Jog operation	
10.3	UP – DOWN operation	
10.4	3-Wire operation	
10.5	Dwell operation	
10.6	Slip Compensation Control	
10.7	PI Control	
10.8	Speed search operation	
10.9	Auto Restart Operation	
10.10	0 Operation Sound Select (carrier frequency change)	
10.1	1 Parameter initialize/Lock	
11. Monit	toring	
11.1	Operating Status Monitoring	
11.2	Monitoring I/O Terminal	
11.3	Monitoring Fault Condition	
11.4	Analogue output	
11.5	Multi-function output terminal and Relay	
12. Prote	ective Function	
12.1	Overload Trip	
12.2	Stall prevention	
12.3	User's fault detection	
12.4	External trip signal	
12.5	Frequency command loss	
12.6	Inverter overload	
13. Trout	bleshooting and Maintenance	13-1
13.1	Protective Functions	13-1
13.2	Fault Remedy	13-3
13.3	Precautions for maintenance	13-5
13.4	Checklist	13-5
13.5	Parts Replacement	13-5
14. COM	Option (RS-485)	14-1
14.1	Introduction	14-1
14.2	Specifications	14-1
14.3	Installation	14-2

Γ

Contents

	14.4	Inverter functional code setting	14-3
	14.5	Operation	14-4
	14.6	COM Protocol(ModBus-RTU)	14-4
	14.7	Parameter code list	14-5
	14.8	Troubleshooting	14-11
15.	Specifica	ations	15-1
	15.1	Technical data	15-1

٦

1. Basic Information & Precaution


1.1 Important precautions

Γ

Unpacking & Inspection		•	Ũ		eck the inverter			•	U		·	
mopoolion	whether the inverter is intact. In addition, inspect the inverter for have occurred during shipping.										lage that may	
			S		4iE5-1C] Inv	Inverter type Input power rating		
		PUT		200-23	OV 1 Pha	se		•				
	ou	TPU		5.5A)-Inpu		ioH ase	Z	-		•	power rating	
				2.5A).5 HP	0-20 0.4kW (D) /	OHz	2	←		•	r capacity	
								←			le and serial num	
		7		06080800001					- Ma	anufa	acturer and	
		lnd Ind	ustria	System	ns Co. <u>,</u> Ltd	Mac	ie ii	1 KOREA	ا ا ma	anufa	acturing country	
	SV	004			iE5	-	1			С		
		Motor rating			Series name		Inp	Input power		RS-485 option		
		001	0.1	[kW]	Extra small commercial		1	Single 200V	phase	С	No option	
		002	0.2	[kW]	inverter		2	3 200V	Phases	-	No option	
		004	0.4	[kW]								
	lf you		found	-	screpancy, dan ear cover page o	-			act your	de	aler or sales	
Preparations of	Instrum	ents a	nd par	ts to be	prepared deper	nd or	n hc	w the inv	verter is	oper	ated. Prepare	
nstruments and	optional	(addit	tional)	equipme	ents and parts as	s neo	cess	ary.				
parts required for												
operation												
nstallation	То оре	rate th	ne inv	erter wit	h high perform	anco	e fo	or a long	, time, i	nstal	I the inverter	
	conside	ring a	proper	r place a	nd the correct d	recti	ion	with prop	er cleara	nces	3	
Wiring	Connec	t the p	ower	supply, n	notor and opera	tion	sigr	nals (con	trol signa	als) t	o the terminal	
	block. N	lote th	at inco	rrect cor	nnection may da	mag	je th	e inverte	r and pei	riphe	eral devices	


1.2 Parts' Names & Details

Appearance

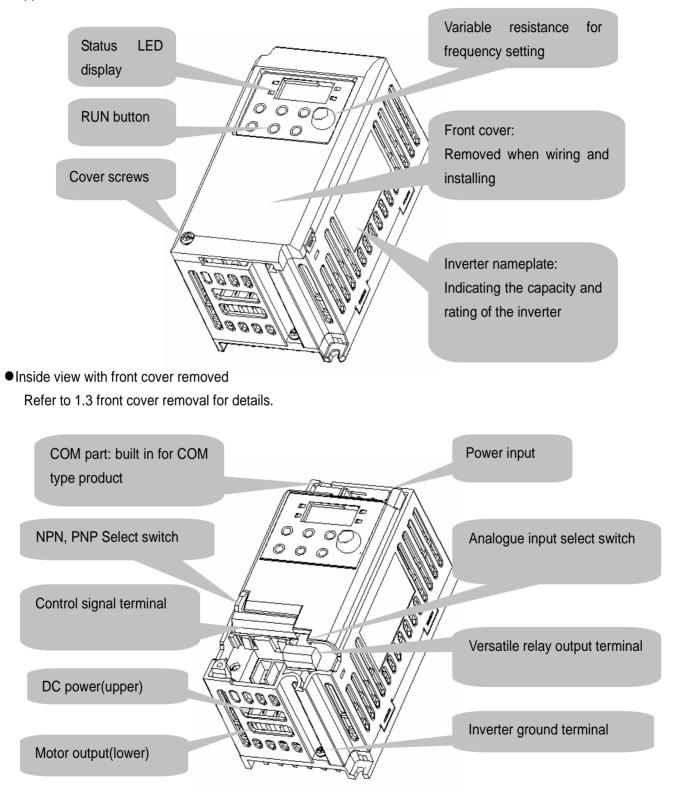



1.3 Assembling & Disassembling

• To remove the front cover, press both indented sides of the cover lightly and pull it up.

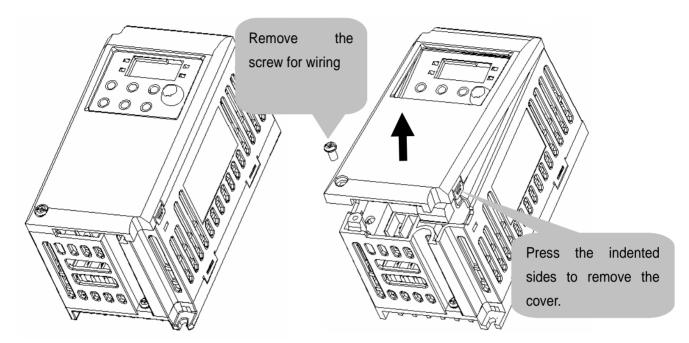

 • The front cover is completely removed if lifting it up and removing the fixed part. Wiring and installation is available only with the cover removed.

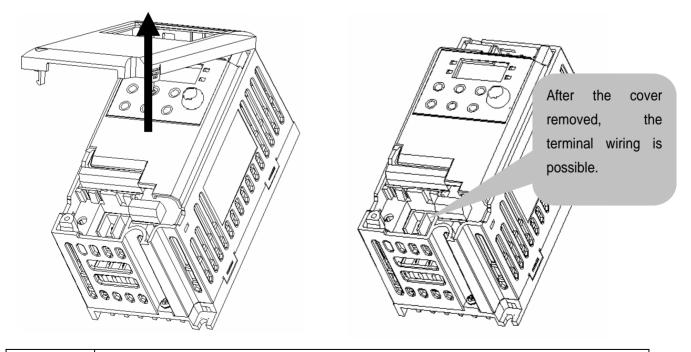




ΜΕΜΟ

٦

2. Installation


2.1 Installation precautions

- Handle the inverter with care to prevent the plastic components damaged.
- Avoid installing the inverter in a place where vibration from bogie or press exists.
- ●Install in a location where temperature is within the permissible range (-10 ~ 40°C).
- Surrounding Air Temperature of 40 °C (UL508C)

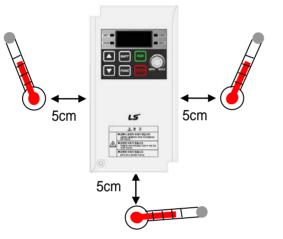

< Ambient Temp Checking Location >

- The inverter will be very hot during operation. Install it on a flame-retardant surface.
- Inverter is a heating source, so the installation place needs enough space for proper heat dissipation
- In case installed in a panel without ventilating opening, secure space as presented in Figure 1.
- If the inverters are installed in a row, make sure to leave space between and among them as seen in Figure 2. Note that side space may vary depending on a panel's cooling efficiency.

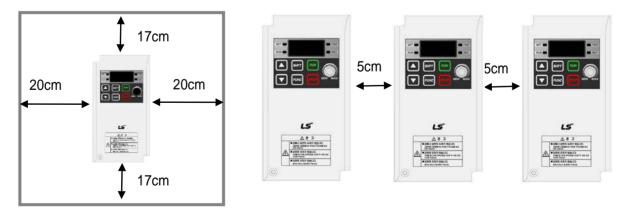




[Figure 2]


- Protect from high temperature and high moisture and/or direct sunlight.
- Install the inverter inside a "totally enclosed" panel to protect against oil mist, water or dust.

Chapter 2. Installation

- •When two or more inverters are installed inside a panel, the inverters and fans must be installed in proper positions with extreme care.
- •Install the inverter using screws or bolts to insure the inverter is firmly fastened.

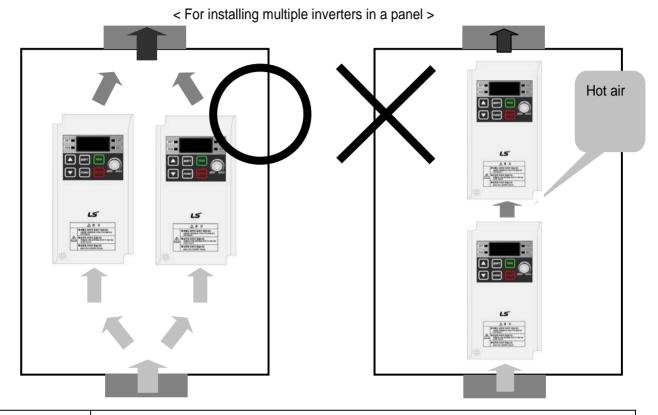


Arrange hot air from the inverters is discharged when installing them on a panel. 'X' shows incorrect layout example.

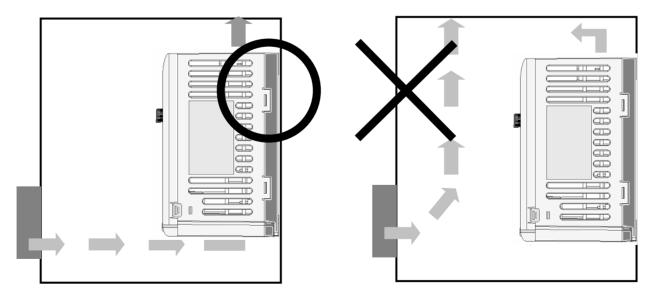

	A fan is to be installed so that the air inside the inverter is well discharged as seen in the
⚠ Caution	left figure. 'X' shows an example of reduced cooling effect, possibly causing the inverter to
	overheat.

2.2 Dimensions

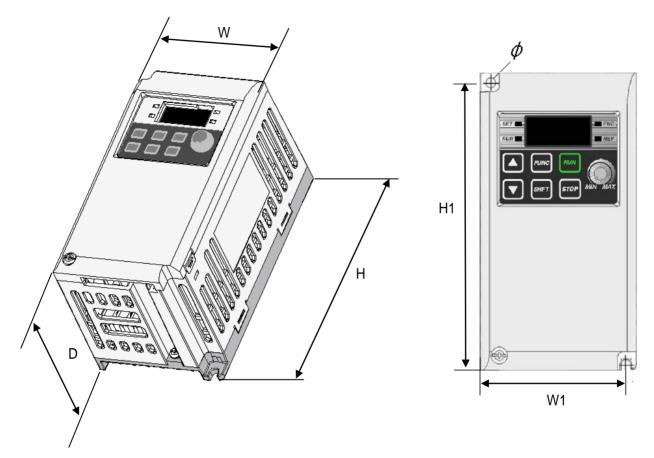

Inverter	001iE5-1	002iE5-1	004iE5-1	001iE5-2	002iE5-2	004iE5-2
W	68	68	68	68	68	68
Н	128	128	128	128	128	128
D	85	85	115	85	85	115
H1	124	124	124	124	124	124
W1	64	64	64	64	64	64
φ	4.2	4.2	4.2	4.2	4.2	4.2
Weight(kg)	0.44	0.46	0.68	0.43	0.45	0.67

Note

Use M4 screw for fixing the inverter on a panel.

ΜΕΜΟ


٦

3. Wiring

3.1 Control Terminal Wiring Diagram	T/M	Description			
	— P1	N 4 14:		FX : forward run	
	P2	Multi		RX : reverse run	
SET FWD	— P3	function		EST : emergency stop	
	P4	Input	ault	RST : trip reset	
	P5	terminal	Default	JOG : jog operation	
	VR	12V power(12V,100mA) for external volume			
)- Al	Analogue f	frequ	ency input(Voltage or current)	
	AM CM	Analogue output: 0 ~ 20[mA] Input signal common			
	30A	Multi fur	nctior	A contact output	
	30B	relay c	outpu	B contact output	
	30C	terminal		A/B contact common	
Power-indicative lamp		Note Refer to a control terr		or the dimensions of the	

٦Г

3.2 Power Terminal Wiring Diagram

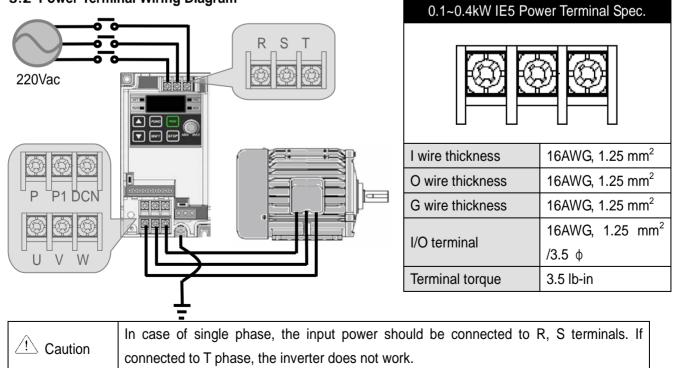


Chapter 3. Wiring

- Suitable For Use On A Circuit Capable of Delivering Not More Than 5000 RMS Symmetrical Amperes, 240 Volts Maximum. (UL508C)
- Use Copper Conductors Only, 75 °C with a torque rating. (UL508C)
- Make sure the input power is off before wiring.
- •When the inverter's input power is cut off after operation, wire it after DC circuit voltage inside the inverter is fully discharged by measuring P1 and N with a tester (voltameter). If there is no tester, wire it after the power lamp is completely out.
- Applying input power supply to the output terminals U, V and W causes internal inverter damage.
- Use ring terminals with insulated caps when wiring the input power and motor wiring
- Do not leave wire fragments inside the inverter. it can cause faults, breakdowns and malfunctions.
- Never short P1 or P with N. Shorting terminals may cause internal inverter damage
- Do not connect static condenser, surge killer or radio noise filter to the output of the inverter. Otherwise, the inverter's protection function starts working or it may cause condenser or surge suppressor broken.
- The inverter is delivered that P~P1 are connected to short circuit

3.3 Grounding Spec.

- •Use the Type 3 grounding method (Ground impedance: Below 100Ω).
- Use the dedicated ground terminal to ground the inverter. Do not use the screw in the case or chassis, etc for grounding.

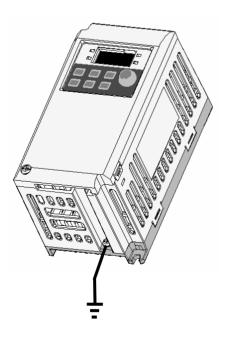

Note

- Grounding procedure
- 1) Remove the front cover.
- 2) Connect the Grounding wire to the ground terminal
- as shown above


Follow the grounding specifications.

Inverter Cap.	001iE5, 002iE5,004iE5 - 1,2
Wire size	14AWG, 2mm ²
Lug spec.	14AWG, 2mm², 4¢
Grounding method	Special type 3

3.4 Control Terminal Wiring Spec.

	Terminal description	COM optio	nal terminal	
	P1 P2 P3 P4 P5 VR AI A	₽ S+	S-	
T/M	Terminal description	Wire size	Torque [lb-in]	Remarks
P1~P5	Multi-function input T/M 1-5	22 AWG,0.3 mm ²	3.0	
VR	Power T/M for external volume resistance	22 AWG,0.3 mm ²	3.0	
AI	Analogue frequency input T/M	22 AWG,0.3 mm ²	3.0	
AM	Multi-function output T/M	22 AWG,0.3 mm ²	3.0	
СМ	Common terminal	22 AWG,0.3 mm ²	3.0	

 Multi-function Relay T/M Spec.




	30A 30B	30C		
T/M	Terminal description	Wire size	Torque[lb-in]	Remarks
30A	Multi-function relay output A contact	20 AWG,0.5 mm ²	4.5	
30B	Multi-function relay output B contact	20 AWG,0.5 mm ²	4.5	
30C	Common for Multi-function relays	20 AWG,0.5 mm ²	4.5	

Tie the control wires more than 15cm away from the control terminals. Otherwise, it interferes with front cover reinstallation.

Note

When you use external power supply (24V) for multi-function input terminal (P1~P5), terminals will be active above 12V level. Take caution not to drop the voltage below 12V.

3.5 PNP/NPN Modes Switch

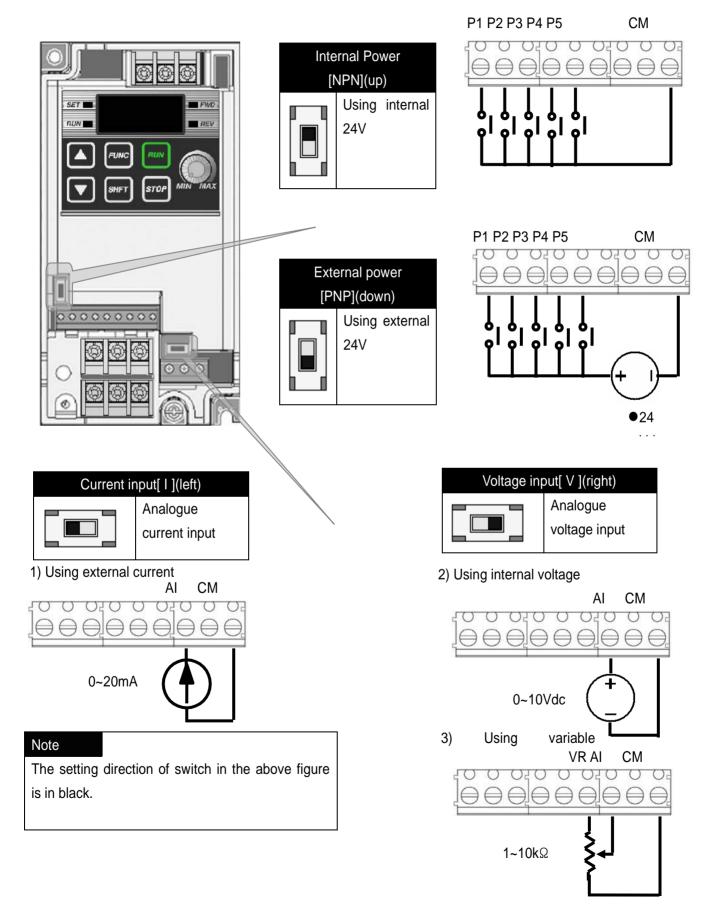

4. Peripheral

4.1 Configuration of Peripherals

Correct peripherals must be selected and properly connected. An incorrectly applied or installed inverter may result in system malfunction or reduction in product life as well as component damage. You must read and understand this manual thoroughly before proceeding.

AC power input Peripheral	Name	Caution
	Input power	Use the power supply within the permissible range of inverter input power rating (Refer to Page 15-1).
	MCCB or ELB	Select circuit breakers with care. A large inrush current may flow in the inverter at power on.
	Magnetic contactor	Install it if necessary. When installed, do not use it for the purpose of starting or stopping. Otherwise, it may cause the reduction of product life.
	AC or DC reactors	The reactors must be used when the power factor is to be improved or the inverter is installed near a large power supply system (20times and more than its cap. and wiring distance within 10m).
	Installation and wiring	Maintain the ambient temperature within the permissible range because the life is sensitive to the temperature. Incorrect terminal wiring could result in equipment damage.
	Inverter output	Do not connect a power factor capacitor, surge suppressor or radio noise filter to the output side of the inverter.

Model	MCCB (LSI		ELB (LSIS)	MC (LSI	S)		
001iE5-1		3A		15A		5A		
002iE5-1		3A		15A		5A		
004iE5-1		5A		15A		5A	MO 0-	0.0
001iE5-2	ABS33c	ЗA	UTE100	15A	EBS33c	5A	MC-6a	9A
002iE5-2		5A		15A		5A		
004iE5-2		10A		15A		10A		


4.2 Recommended MCCB and Magnetic Contactor

4.3 Recommended Reactors

Model	AC Input fuse	AC reactor	DC reactor
001iE5-1	5A	4.2mH, 3.5A	10mH, 3A
002iE5-1	5A	4.2mH, 3.5A	10mH, 3A
004iE5-1	10A	5.1mH, 5.4A	7mH, 5A
001iE5-2	5A	4.2mH, 3.5A	10mH, 3A
002iE5-2	5A	4.2mH, 3.5A	10mH, 3A
004iE5-2	5A	4.2mH, 3.5A	7mH, 5A

5. Loader

5.1 Configuration

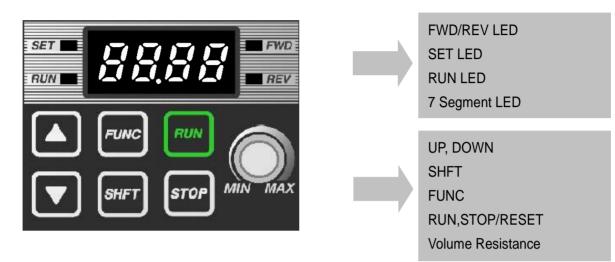

Note

STOP key of the inverter iE5 also contains reset function, which is used to cancel trip. Trip may be cancelled by using this key.

Display	Description		
FWD	'On' during forward run		
REV	'On' during reverse run		
SET	'On' during parameter setting	Blinks when a fault occurs.	
RUN	'On' during inverter operation		
7 Segments	Displaying operation status and parameter information		

Key	Name	Description	
	Up	Scroll through codes or increase parameter value	
▼	Down	Scroll through codes or decrease parameter value	
RUN	Run	Operation command	
STOP	Stop	STOP : stop during operation, RST : reset in case of fault	
FUNC Function Edit		Edit parameters or save edited parameter values	
SHFT Shift Move among groups/the number of ciphers left during parameter setting		Move among groups/the number of ciphers left during parameter setting	
Volume resist	ance	Used to change operation frequency	

5.2 Alpha-numeric view on the LED

Refer to the below table summarizing the characters displayed on the LED.


Inverter LED	No.	Inverter LED	Eng	Inverter LED	Eng	Inverter LED	Eng
	0	8	А	Ľ	K		U
;	1	5	В		L	L	V
Ę	2	Ľ	С	-	М	11	W
3	3	ď	D	ū	N	4	Х
4	4	E	Е		0	Ч	Y
5	5	F	F	p	Ρ	11	Z
5	6		G	ą	Q		
7	7	H	Н	,	R		
8	8	;	I	5	S		
9	9		J		Т		

Note

Inverter iE5 uses 7-segment display. Therefore, it displays numbers and alphabet as the above table. Make sure to fully comprehend them for reading the fault messages/functional information.


Note

The 7-Segment operates in three statuses; on, off and blink. Throughout this manual, on is in black, blank is in grey and off is not separately presented.

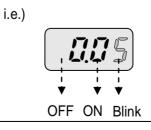


5.3 Moving to other groups

•There are two different parameter groups in SV-iE5 series as shown below.

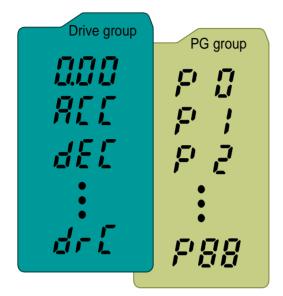

Туре	Description
Drive group	Basic parameters necessary to
	operate the inverter; target
	frequency,
	acceleration/deceleration time
	and etc.
PG group	Parameter group for additional
	functions

Moving to the other parameter group

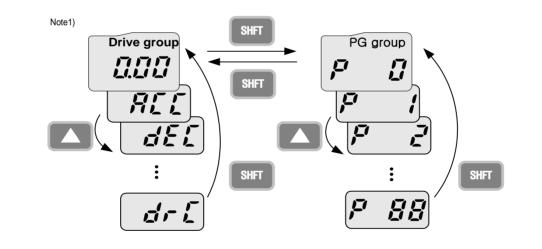


Can move between groups if pressing SHFT key in code 0 of Drive Group/PG Group as shown in the figure. If pressing SHFT in other codes but 0, it moves to the first code of a selected group and it moves between groups if pressing SHFT once more.

¹⁾ Target frequency is set in the first code of Drive Group. It is delivered with 0.00 set as the default and any differently changed RUN frequency is displayed once a user changes it.

5.4 How to move among codes in a group


Moving between groups

Moving from 15 of PG Group to Drive Group

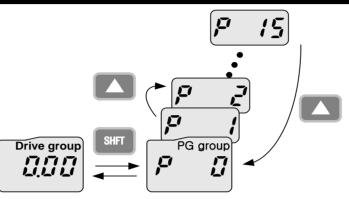

1		Display Code 15 of PG Group.
I		Press SHFT key.
2	2	It displays F0, the first code of PG Group.
2		Press SHFT key.
3		It displays 0.00, the first code of Drive Group.


•Code change in Drive Group

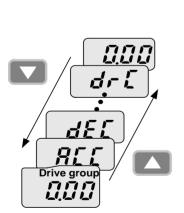

1		 It displays 0.00, the 1st code of Drive Group. Press UP(▲) key. 				
2		 It displays ACC, the 2nd code of Drive Group. Press UP(▲) key. 				
3		 It displays dEC, the 3rd code of Drive Group. Keep pressing UP(▲) key. 				
4		 . It displays drC, the final code of Drive Group . Press UP(▲) key in the final code of Drive Group. 				
5		It returns to the 1st code of Drive Group.				
Note	Note					
For m	For moving reversely, use $DOWN(oldsymbol{ abla})$ key.					

•Code jump

Moving from code 1(P 0) to the code15(P15) in PG Group

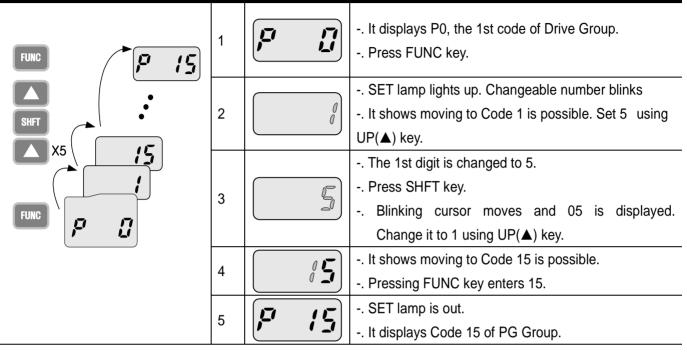

•Code change in PG Group


Moving from code 1 to code 15 in PG group			
	1		 It displays Code 1 of PG Group. Keep pressing UP(▲) key until P 15 is displayed.
	2	F 15	It displays Code 15 of PG Group.

Note

Some codes will be skipped in the middle of increment (\blacktriangle)/decrement (\blacktriangledown) for code change in PG Group. That is because it is programmed that some codes are intentionally reserved for later use or the codes user does not use are invisible. For details, refer to the table of functions in Chapter 7.

Frequency setting

 When changing RUN frequency to 30.05 [Hz] in Drive Group



1		It displays Target Frequency, the 1st code of Drive Group.
	<u> </u>	Press FUNC key.
	2	SET lamp lights up.
2		The second decimal 0 becomes active.
	Press the UP (\blacktriangle) key until 5 is displayed.	
2	3	The second decimal is changed to 5.
3		Press SHFT key.
4	4	The first decimal 0 becomes active.
4		Press SHFT key twice.
F	5	The first digit 0 becomes active.
Э		Set 3 using UP(▲) key.
6		Press FUNC key.
Ŭ		
7		30.05 blinks quickly and it asks whether to save the value.
'		Press FUNC key.
8	JULL	SET lamp is out.
°	30.05	Blink stops and the saved target frequency are displayed.


Note

Parameter setting is disabled when pressing other than Enter Key in step 6 where 30.05 blinks quickly.

5.5 How to set parameters

• Parameter change in Drive Group

Changing acceleration duration from 5.0 to 16.0 seconds

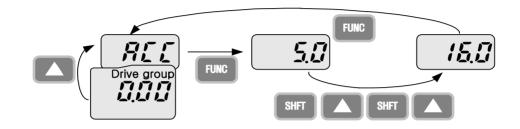


		It displays the target frequency, the 1st code of Drive Group.
	Press UP(\blacktriangle) key.	
		It displays ACC, the acceleration duration, the 2nd code of Drive Group.
2		Press FUNC key.
		SET lamp lights up.
3	5.0	0 in 5.0 blinks, which means that the digit may be changed.
		Press SHFT.
		The digit to change is moved to the first digit.
4	l li	Press UP(▲) key.
5		The digit to change is increased, being changed to 6.0.
0		Press SHFT key.
_	6	The digit to change is moved the tenth digit.
6		Press UP(▲) key.
		It displays 16.0.
_		Press FUNC key.
7		16.0 blinks wholly. ¹⁾
		Press FUNC key. ACC duration of 16.0 seconds is entered.
		-
8		SET lamp is out
		It displays ACC. ACC duration is changed to 16.0 seconds.

¹⁾ That every digit blinks quickly while modifying a parameter means asking whether to enter a modified value. At the moment, pressing FUNC key completes the entry. To cancel it instead of entering a parameter, press any key such as SHFT, $UP(\blacktriangle)$ or $DOWN(\heartsuit)$ but FUNC.

• Parameter change in PG Group

Changing P34, Code 34 of PG Group from 0 to 1

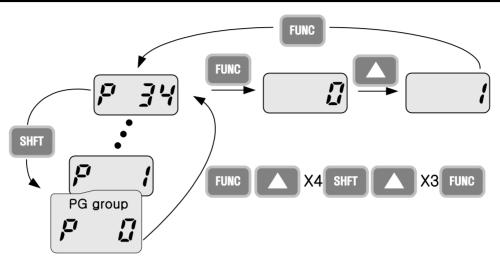


		The 1st code of PG Group is displayed.
1		Press FUNC key.
	SET lamp lights up.	
2		Can move to Code 1.
		Chang it to 4 by using UP(▲) key.
3		The first digit is changed to 4
5		Press SHFT key.
4	501	0 in 04 is active.
4		 Increase up to 3 by using UP(▲) key.
5		Can move to Code 34
5		Press FUNC key.
		SET lamp is out.
6	$P = \frac{1}{2}$	It means the current position is Code 34 of PG Group.
		Press FUNC key.
		SET lamp light up.
7		Code 34 is set to 0.
		Increase it to 1 by using UP(▲) key.
		Press FUNC key.
8	0 0	Press FUNC key once more when 1 blinks.
		SET lamp is out.
9	אי ה	Function code change is complete.
9		Press SHFT key.
10		Moved to Code 1 of PG Group.

5.6 Monitoring Operation Status

Displaying Current Output

Monitoring output current in Drive Group

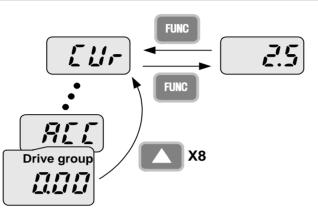


1		 The target frequency, Code 1 of Drive Group is displayed Press UP(▲) key or DOWN(▼) key until Cur is displayed.
2		Moved to a code to monitor output current. Press FUNC key.
3	25	 Present output current is 2.5[A]. Press FUNC key.
4		Return to the output current monitoring code.

Note

Other parameters in Drive group such as dCL (Inverter DC link voltage) or vOL (Inverter output voltage) can be monitored via the same method.

•Fault display

How to monitor fault condition in Drive Group

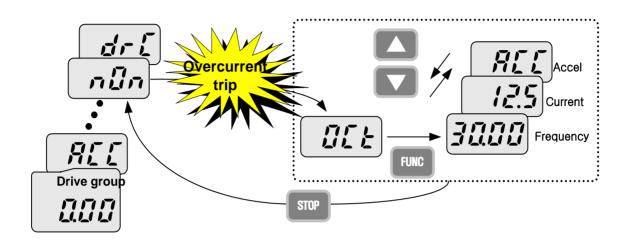


1		Oct appears when an Overcurrent fault occurs.
		Press FUNC key.
		Press UP(▲) key or DOWN (▼) key.
2	3000	The run frequency at the time of trip is displayed.
		Press UP(▲) key.
3	125	The output current at the time of trip is displayed
		Press UP(▲) key.
4	REE	Operating status is displayed. A fault occurred during acceleration
		Press STOP key.
5	ิกมีก	A fault condition is cleared and "nOn" is displayed.

Note

Trip occurrence is displayed in one of modes like ACC, DEC, Stp or Std. Fault causes may be expected by using the indication.

•When types of faults occur at the same time

When Overcurrent(OCt), overvoltage(Ovt) and overheat(OHt) occur simultaneously

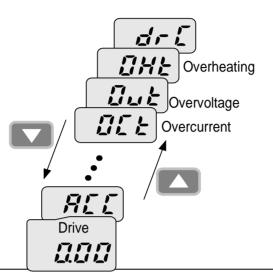

-. When various trips occur simultaneously, it shows like the figure above and it can show up to 3 trips.

Note

In case inverter trip occurs, it shows the type in the current fault status indication code. In the case, if clearing it away by resetting or turning it off, fault info is moved to fault history(P 1) of PG Group.

However, if any, the existing fault history moves from (P 1) to (P 2) or from (P 2) to (P 3); the latest fault info is saved in (P 1) through (P 3).

ΜΕΜΟ

6. Basic Operation

6.1 Frequency Setting and Basic Operation

Note

The following parameters are set to factory defaults. Therefore, results may be different if any parameter is changed by a user. In this case, initialize parameters(see page 10-13) back to factory defaults and follow the instructions below.


• If setting frequency with the loader and commanding operation on the inverter's terminal

No.	Indication	Operation & description
1		Target frequency, the first code of Drive Group when turning it on.
		Press FUNC key.
2		The second decimal, 0 in 0.00 displayed blinks.
2		Press SHFT three times.
3		00.00 is displayed and the very left 0 blinks.
		Press UP(▲) key.
4		Confirming 10.00, press FUNC key.
		10.00 blinks quickly as a whole. Press FUNC key once more.
5		Target frequency is changed to 10.00Hz.
5		Turn on the switch between P1(FX) and CM terminals.
		FED(forward run) lamp of the inverter display blinks and accelerating frequency is
6		displayed on the LED.
0		When target run frequency 10Hz is reached, 10.00 is displayed.
		Turn off the switch between P1 (FX) and CM terminals.
7		RUN lamp begins to blink and decelerating frequency is displayed on the LED.
		When run frequency is reached to 0Hz, Run and FWD lamp turn off and target
		frequency(10.00) is displayed.

Wiring diagram	Operating pattern
$\begin{array}{c} 220 \text{ Vac} \\ \hline \bullet \\ \bullet \\$	10 Hz Frequency P1(FX)-CM ON OFF

No.	Indication	Operation & description
1		Target frequency, the first code of Drive Group when turning it on.
		Press UP(▲) key four times.
2	~~~~~~~~~~~~~	Moved to a code to change a frequency setting mode.
2		Press FUNC key.
3		The current frequency setting mode is set to 0(frequency setting using loader).
5		Press UP(▲) key three times.
		Check 3(frequency setting by loader's volume resistance).
4		Press FUNC key.
		3 blinks quickly. Press FUNC key once more.
	~ ~ ~ ~	Frq is displayed and frequency setting mode is changed to loader volume.
5		Press SHFT moves to target frequency, the first code of Drive Group.
		Turn the loader volume to MAX or MIN to set to 10.00Hz.
	- <i>10.00</i> -	Turn on the switch between P1 (FX) and CM.
		FED(forward run) lamp of the inverter display blinks and accelerating frequency is
6		displayed on the LED.
		When run frequency 10Hz is reached, the value is displayed as shown left.
		Turn off the switch between P1 (FX) and CM terminals.
7		FED(forward run) lamp of the inverter display blinks and decelerating frequency is
		displayed on the LED.
		When run frequency is reached to 0Hz, Run and FWD lamp turn off and target
		frequency(10.00)is displayed

• If setting frequency with volume resistance on the loader and commanding operation on the inverter's terminal

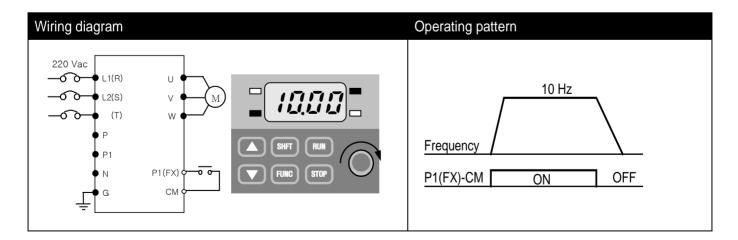

No.	Indication	Operation & description
1		Target frequency, the first code of Drive Group when turning it on.
		Press UP(▲) key three times.
2		Moved to a code to change a frequency setting mode
2	่ม่าม	Press FUNC key.
3		The current frequency setting mode is set to 1(terminal)
5		Press DOWN (▼) key.
4		Operation command mode may be changed to 0(RUN key of the loader).
-		Press FUNC key twice.
5		It displays drv and operation command mode is changed to RUN key.
5		Press UP(▲) key once.
6	6 F, q	Moved to frequency setting mode(Frq) code.
		Press FUNC key.
7		Frequency setting mode is changed to 0(keypad of the loader).
		Press UP(▲) key three times.
8		Frequency setting mode may be changed to 3(loader's volume resistance).
		Press FUNC key twice.
9		It displays Frq and frequency setting mode is changed to loader volume.
		Turn the loader volume to set to 10.00 in either Max or Min direction.
		Press RUN key. FRW(forward run) lamp of the inverter display blinks and
10		accelerating frequency is displayed on the LED.
10		When run frequency 10Hz is reached, it is displayed as shown left.
		Press STOP key.
		FRW(forward run) lamp of the inverter display blinks and decelerating frequency is
11		displayed on the LED.
		When run frequency 10Hz is reached, FWD(forward run) lamp is out and target
		frequency(10.00) is displayed on the LED.

• If setting frq with volume resistance on the loader and commanding operation with RUN key on the loader

Γ

Wiring diagram	Operating pattern
220 Vac -0 -0 L1(R) U M M P P1 N G 	In Hz Frequency RUN STOP/RST

ΜΕΜΟ	

7. Function List

Γ

Drive Group

Display	Name	Min/Max range	De	scription		Factory defaults	Adj. during run	Page
0.0	Frequency command	0 ~ 200 [Hz]	Du Du mu	ring stop, it ring run, it ılti-step oper	r sets the operation frequency. displays Frequency Command; shows output frequency. During ation, it becomes frequency 0. It reater than Max frequency(P16).	0.00	0	9-1
ACC	ACC time	0 ~ 6000	Du	ring multi-ad	cc/dec operation, this parameter	5.0	0	9-8
dEC	DEC time	[sec]	sei	rves as acc/c	lec time 0.	10.0	0	9-8
drv	Drive mode	0~3	0	Operate wit	h RUN/STOP key of the loader	1	Х	9-5
		1 2 3	Terminal operation	FX: forward run RX: reverse run			9-6	
			2		FX: Run/stop command RX: Reverse rotation			
			3	RS485 option	communication: communication			
Frq	Frequency	0 ~ 4	0	Digital	Set loader digital frequency 1	0	Х	9-1
	setting		1		Set loader digital frequency 2			9-1
	method		2	Analogue	Terminal AI input			9-3
			3		Loader volume resistance	_		9-2
			4		RS485 option			
St1	Multi-step frequency 1	0 ~ 200 [Hz]	Se	t multi-step fi	requency 1	10.00	0	9-4
St2	Multi-step frequency 2		Se	Set multi-step frequency 2) 0	1
St3	Multi-step frequency 3	-	Se	t multi-step f	requency 3	30.00	0	-

• Drive Group

Display	Name	Min/Ma x range	Descri	otion	Factory defaults	Adj. during run	Page
CUr	Output current	-	Display	/ output current	-	-	11-1
rPM	No. of motor rotation	-	Display	/ the no. of motor rotation(RPM)	-	-	11-1
dCL	Inverter DC voltage	-	Display	/ DC voltage inside the inverter	-	-	11-1
vOL	Output voltage	-	Display	/ the inverter's output voltage.	vOL	-	11-2
nOn	Fault display	-		/ the types of fault, frequency, and operation status.	-	-	11-4
drC	Selection of motor rotation	F, r	· ·	ation command mode(drv) is set to ct the direction of motor rotation	Р	0	9-7
	direction		F	Forward operation			
			r	Reverse operation			

●PG	Group
-----	-------

Γ

Display	Name	Min/Max range	Descrip	tion	Factory defaults	Adj. during run	Page
P 0	Jump code	0 ~ 88	Sets the	e code number to jump	1	0	5-5
P 1	Fault log 1	-	It logs	the information on the types of	nOn	-	11-4
			faults,	and the frequency, current and			
			status s	such as acceleration, deceleration			
			and sto	p at the time of trouble. The latest			
			fault is	automatically recorded in log 1.			
P 2	Fault log 2	-			nOn	-	_
P 3	Fault log 3	-			nOn	-	
P 4	Fault log removal	0~1	Remov	e log P1~P3.	0	0	
P 5	Prohibition of	0~2	0	Both F/R directions available	0	Х	9-7
	forward/reverse		1	Forward rotation prohibited			
	rotation		2	Reverse rotation prohibited			
P 6	Acc pattern	0~1	0	Linear pattern operation	0	X	9-9
Ρ7	Dec pattern		1	S-curve pattern operation			
P 8	Stop mode	0~2	0	Deceleration to stop	0	Х	9-14
	selection		1	DC brake to stop			
			2	Free run to stop			
P 9	DC brake start	0.1 ~ 60	It sets [DC brake start frequency.	5.00	Х	10-1
1)	frequency	[Hz]	lt ca	nnot be set below start			
			frequer	ncy(P18).			_
P10	DC brake wait	0 ~ 60	When	DC brake frequency is reached,	0.10	Х	
	time	[sec]	the inv	verter holds the output for the			
			setting	time before starting DC brake.			_
P11	DC brake voltage	0 ~ 200	It sets t	the amount of DC voltage applied	50	X	
	amount	[%]	to a mo	tor. Motor rated current(P43).			
P12	DC brake time	0 ~ 60	It sets t	he time taken to apply DC current	1.0	Х	
		[sec]	to a mo	tor.			

¹⁾ Displayed only when P8 is set to 1(DC brake to stop)

-10						
Display	Name	Min/Max range	Description	Factory defaults	Adj. during run	Page
P13	DC brake start	0 ~ 200	It sets the amount of DC voltage before a motor	50	Х	10-2
	voltage	[%]	starts to run. Motor rated current(P43)			
P14	DC brake start	0 ~ 60	It applies the current to a motor for the set time	0.0	Х	
	time	[sec]	before motor accelerates.			
P15	Jog frequency	0 ~ 200	It sets the frequency for jog operation. It can not	10.00	0	10-3
		[Hz]	be set above the max frequency(P16).			
P16	Max	40 ~ 200	This parameter sets the upper limit frequency.	60.00	Х	9-7
	frequency	[Hz]	It is frequency reference for Accel/Decel			
			Note	-		
			If changing the max frequency, all other			
			frequency parameters but P17(base frequency)			
			would be changed to the frequency if they are			
			above the new max. frequency.			
P17	Base	30 ~ 200	The inverter outputs its rated voltage to the	60.00	Х	9-11
	frequency	[Hz]	motor at this frequency.			
P18	Start	0.1 ~ 10	The inverter starts to output its voltage at this	0.5	Х	-
	frequency	[Hz]	frequency.			
			It is lower frequency limit of frequency(Hz).			
P19	Torque boost	0~1	0 Manual torque boost	0	Х	9-13
	selection		1 Auto torque boost	-		
P20	Forward	0 ~ 15	Torque boost amount of motor during forward	5.0	Х	-
	torque boost	[%]	run, based on max. output voltage.			
P21	Reverse		Torque boost amount of motor during reverse	5.0	Х	-
	torque boost		run based on max. output voltage.			
P22	V/F pattern	0~1	0 Linear	0	Х	9-11
			1 Square	-		9-12
	1	1		1		

Γ

Display	Name	Min/Max range	Descriptio	on			Factory defaults	Adj. during run	Page
P23	Output voltage adjustment	40 ~ 110 [%]		the amount ntage of inpu	100	X	9-12		
P24	Overload trip selection	0~1	motor is		off the inverter of Overload protect	•	1	0	12-1
P25	Overload trip level	50 ~ 200 [%]			f overload curren or rated current(P		180	0	
P26	Overload trip time	0 ~ 60 [sec]			er output when c vs for overload trip	•	60	0	
P27	Stall prevention select	0~7	Sets stall Func. Set 0 1 2 3 4 5 6 7	prevention fi During dec. bit 2 - - - - - √ ✓ ✓ ✓ ✓	Unction During constant run bit 1 - - ✓ ✓ - - - ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓	During acc. bit 0 - ✓ - ✓ - ✓ - ✓ - ✓	0	X	12-1
P28	Stall prevention level	30 ~ 150 [%]	preventio		of current to a based on the pe nt(P43).		150	X	12-1
P29	Save up/down frequency	0~1	during up	/down opera	d frequency	0	X	10-4	
P30 2)	Save Up/Down	-	It saves t decelerat	•	y before the inve	rter stops or	0.00	-	10-4

^{1),2)} Set P24 and P29 to 1 to display this parameter.

Display	Name	Min/Max range	Descrip	otion			Factory defaults	Adj. during run	Page
P31	Dwell frequency	0.1 ~ 200 [Hz]	acceler motor c It can	run frequency rate after dwell during dwell time be set within m ncy(P18).	frequency is a (P32).	applied to the	5.00	x	10-5
P32	Dwell time	0~10 [sec]	Sets th	e time for dwell o	peration.		0.0	X	
P33	Operator's fault detection	0 ~ 7 [bit]	Sets fa Func. Set 0 1 2 3 4 5 6 7	ult detection item Earth detection during run(GCt) bit2 - -	ns at operator's Input phase detection (CoL) bit1 - ✓ ✓ ✓ ✓ ✓ ✓ ✓	discretion Output phase detection (Pot) bit0 - ✓ ✓ ✓ ✓ ✓ ✓ ✓		0	12-2
P34	Power On Start Selection	0~1	Motor s	ivated when drv starts acceleratic X or RX terminal	wer is applied	0	X	9-7	
P35	Restart after fault reset selection	0~1	Control Motor	ivated when drv terminal). accelerates after ne FX or RX term	r the fault con		0	0	9-8

U PC	Group									
Display	Name	Min/Max range	Descrip	otion				Factory defaults	Adj. during run	Page
P36	Speed	0 ~ 15	It is ac	tive to pr	event any	possible fa	ult when	0	Х	10-10
	search	[bit]	the inv	erter outp	outs its vo	oltage to the	running			
	selection		motor.							
			Func.	Power	Restart	Operation	Normal			
				on	after	on after	acc.			
				start	instant	fault				
				(P34)	power	(P35)				
			Set		failure					
				bit3	bit2	bit1	bit0			
			0	-	-	-	-			
			1	-	-	-	\checkmark			
			2	-	-	✓				
			3	-	-	\checkmark	\checkmark			
			4	-	✓	-	-			
			5	-	✓	-	✓			
			6	-	\checkmark	✓	-			
			7	-	\checkmark	\checkmark	\checkmark			
			8	✓	-	-	-			
			9	✓	-	-	\checkmark			
			10	\checkmark	-	\checkmark	-			
			11	\checkmark	-	\checkmark	\checkmark			
			12	\checkmark	\checkmark	-	-			
			13	\checkmark	\checkmark	-	\checkmark			
			14	\checkmark	\checkmark	\checkmark	-			
			15	✓	\checkmark	✓	\checkmark			
P37	Speed		Limits	the amo	unt of cu	urrent during	g speed	100	0	
	Search		search	operatio	on, base	d on moto	or rated			
	Current		current	(P43)						
	Level									

Γ

Display	Name	Min/Max range	Description	Factory defaults	Adj. during run	Page
P38	Number of Auto Restart try	0~10	It sets the number of restart tries after a fault occurs. Auto Restart is deactivated if the fault outnumbers the restart tries. This function is active when [drv] is set to 1 or 2 {Run/Stop via control terminal}.	0 1)	0	10-12
P39	Auto Restart time	0 ~ 60 [sec]	It sets the time between restart tries.	1.0	0	
P40	Motor type select	0.1~ 0.4 [kW]	Selects the type of a motor to use	2)	х	10-6
P41	Number of motor poles	2 ~ 12	It is displayed via rpm in drive group.	4	X	
P42	Rated slip frequency	0 ~ 10 [Hz]	Enter the difference between the input power frequency and the value calculated by converting rpm described in the nameplate to frequency.	3)	Х	
P43	Motor rated current	0.0~ 25.5 [A]	Enter motor rated current on the nameplate.	-	Х	
P44	No Load Motor Current	0.0 ~ 25.5 [A]	Enter the current value detected when the motor is rotating in rated rpm after the load connected to the motor shaft is removed. Enter the 50% of the rated current value when it is difficult to measure No Load Motor Current.	-	X	
P45	Carrier frequency select	1 ~ 10 [kHz]	It selects the audible sound of the motor. If the set value is higher, the inverter sound is quieter but the noise from the inverter and leakage current will become greater.	3	0	10-13

¹⁾No auto restart in case of protection functions such as OHt, Lvt, ESt, HWt.

²⁾ P40 initial value is preset based on inverter rating.

 $^{3)}\,\text{P42}$ ~ P44 factory default values are set based on the inverter rating.

•PG	Group
-----	-------

Γ

Display	Name	Min/Max range	Desc	ription	Factory defaults	Adj. during run	Page
P46	Control mode	0~2	0	V/F control	0	Х	9-11
	selection		1	Slip compensation control			10-6
			2	PI control			10-8
P47	P gain for PI	0~ 999.9	lt se	ets the gains for the PD controller's	300.00	0	
1)	controller	[%]	resp	onse characteristics.			
P48	I time for PI	0.1~32.0]		1.00	0	
	controller	[sec]					
P50	F gain for Pl	0 ~ 99.99	Feed	Feed forward gain for PI controller.		0	
	controller	[%]					
P51	Upper limit of	0.1 ~ 200	It lin	It limits the amount of the output frequency		0	
	PI frequency	[Hz]	throu	through the PI operation.			
P52	Lower limit of	0.1 ~ 200	lt is	s settable within the range of Max	0.50	0	
	PI frequency	[Hz]	frequ	ency(P16) and Start frequency(P18).			
P53	Power on	Power on $0 \sim 15$ It selects the parameter to be displayed on the		0	0	11-2	
	display		displ	ay when the input power is first applied.			
			0	Operation frequency			
			1	Acc. time			
			2	Dec. time			
			3	Drive mode			
			4	Frequency mode			
			5	Multi-step frequency 1			
			6	Multi-step frequency 2			
			7	Multi-step frequency 3			
			8	Output current(Cur)			
			9	Motor rpm			
			10	Inverter DC voltage(DCL)			
			11	User display select(vOL)			
			12	Fault display 1			
			13	Direction of motor rotation			
			14	Output current			
			15	Motor rpm			

¹⁾ Displayed only when P46 is set to 2(PI control).

Display	Name	Min/Max range	Description	Factory defaults	Adj. during run	Page
P54	Gain for Motor rpm display	1 ~ 1000 [%]	It is used to convert gear ratio of load system and display rpm of drive group. It may be monitored on code.	100	0	11-1
P55	Filter time constant for Al input	0 ~ 9999	Adjusts the responsiveness of analogue input	10	0	9-3
P56	Min input for Al(vol/cur)	0 ~ 100 [%]	Sets the min value of analogue input as the percentage of the whole input	0	0	
P57	Frequency corresponding min input for Al	0 ~ 200 [Hz]	Frequency in case analogue input is the min value.	0.00	0	
P58	AI max input	0 ~ 100 [%]	Sets the max value of analogue input as the percentage of the whole input.	100	0	
P59	Frequency corresponding to AI max input	0 ~ 200 [Hz]	Frequency in case analogue input is the max. value.	60.00	0	
P60	Filter time constant for Volume input	0 ~ 9999	Adjusts the responsiveness of volume input operation.	10	0	9-2
P61	Min value for volume input	0 ~ 100 [%]	Sets the min rpm of volume input as the percentage of the whole input	0	0	
P62	Frequency corresponding to volume input	0 ~ 200 [Hz]	Frequency at minimum current of volume input	0.00	0	
P63	Max. value of volume input	0 ~ 100 [%]	Sets the max volume input as the percentage of the whole input.	100	0	
P64	Frequency corresponding to volume input	0 ~ 200 [Hz]	Frequency at maximum volume input.	60.00	0	
P65	Criteria for Analog 0 ~ 2 Input Signal loss		0: Disabled1: activated below half of set value.2: activated below set value.	0	0	12-4

Display	Name	Min/Max range	Desc	ription				Factory defaults	Adj. during run	Page
P66	Multi-function input	0 ~ 24	0	Forward	d run co	mmand	(FX)	0	0	9-6
	terminal P1 define		1	Reverse	e run co	mmand	(RX)			
P67	Multi-function input terminal P2 define		2	EST-Emergency Stop Trip : temporary output cut-off			1	0	-	
P68	Multi-function input		3	Reset when a fault occurs(RST)			urs(RST)	2	0	-
	terminal P3 define		4	Jog operation command (JOG)			d (JOG)			10-3
P69	Multi-function input		5	Multi-Step freq – low			3	0	9-5	
	terminal P4 define		6	Multi-Step freq – high						
P70	Multi-function input		7	-				4	0	-
	terminal P5 define		8	-	-					
			9	-				-		
			10	- DC brake during stop -			-			
			11				-		10-1	
			12				-		-	
			13	-						-
			14	-				-		-
			15	Up-	Freq	uency u	р			10-4
			16	down	Freq	uency d	own			
			17	3-wire c	peration	า				10-4
			18	Externa	l trip: A	Contact	(EtA)			12-5
			19	Externa	l trip: B	Contact	(EtB)			
			20	Change	from	PI op	peration to			-
				general	operation	on				
			21	-						-
			22 Analog Hold						9-4	
			23					_		9-10
			24							10-4
P71	Input terminal status		BIT4	BIT3	BIT2	BIT1	BIT0	-	-	11-3
	display		P5	P4	P3	P2	P1			

Γ

Display	Name	Min/Max range	Des	cription		Factory defaults	Adj. during run	Page
P72	Filtering time constant for Multi- function Input terminal	1 ~ 20		e value is set higher, the r ut terminal is getting slower		3	0	-
P73	Analog output item select	0~3	0 1 2 3	1Output current150 %2Output voltage282 V3Inverter DC link voltageDC 400V		0	0	11-5
P74	Analog output level adjustment	10 ~ 200 [%]	Bas	Based on 10V.			0	
P75	Frequency detection level	0 ~ 200 [Hz]		Used when P77 is set to 0-4. Cannot be set higher than P16.			0	11-7 ~
P76	Frequency detection bandwidth						0	11-9
P77	Multi-function relay select	0~17	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	FDT-1 FDT-2 FDT-3 FDT-4 FDT-5 - Inverter Overload (IOLt) Motor stall (STALL) Over voltage trip (OVt) Low voltage trip (LVt) Inverter Overheat (OHt) Command loss During Run During Stop During speed searching Wait time for run signal in		17	0	11-7 11-8 11-9 11-10
			16 17	Wait time for run signal ir Fault output select	-			


Display	Name	Min/Max range	Descrip	tion			Factory defaults	Adj. during run	Page
P78	Fault relay output	0 ~ 7 [bit]	Func. Set 0 1 2 3 4 5 6 7	Operation when setting the number of auto restart try(P38) bit 2 - - - - - - - - - - - - - - - - - - -	Operation when the trip other than low voltage trip occurs bit 1 - - √ √ - - √ √ √ √ √ √ √ √ √ √	Operation when the low voltage trip occurs bit 0 - ✓ - ✓ - ✓ - ✓ - ✓ - ✓	2	0	11-10
P79	Inverter number	1 ~ 250	Set for	Set for RS485 communication				0	
P80	Baud rate	0~2	0 1	1 4800 [bps]				0	14-3
P81	Drive mode select after loss of frequency command	0~2	It is u	It is used when freq command is given via signal(volume/Al). 0 Continuous operation at the frequency before its command is lost. 1 Free Run stop (Output cut-off)			0	0	12-4
P82	Wait time after loss of frequency command	0.1 ~ 120 [sec]	input fr frequen	Time inverter determines whether there is the input frequency command or not. If there is no frequency command input during this time, inverter starts operation via the mode selected at P81.				0	
P83	Communication time setting]	2 ~ 100 [ms]		communication			5	0	

Γ


Display	Name	Min/Max range	Descri	Description Sets communication parity and stop bit.				Adj. during run	Page
P84	Parity/stop bit	0 ~ 3	Sets c	ommunicat	ion pari	ty and stop bit.	0	0	
	setting			Parity bit		Stop bit			
			0	-		1 Stop Bit			
			1	-		2 Stop Bit			
			2	Odd Par	rity	1 Stop Bit			
			3	Even Pari	ty	1 Stop Bit			
P85	Parameter	0 ~ 3	Initializ	ze the par	ameters	0	Х	10-13	
	initialization		factory	/ defaults					
			0	-					
			1	Initialize b	ooth gro	ups			
			2	Initialize D	Drive Gr	oup			
			3	Initialize F	PG Grou	q			
P86	Password	0 ~ FFFF	Enter	password	to to	prohibit parameter	0	0	10-14
	registration		chang	e. Set it as	hexade	cimal number			
P87	parameter	0 ~ FFFF	Prohib	oit or ca	ancel	parameter change	0	0	10-15
	change		prohib	ition by usi	ng the p	bassword set in P86.			
	prohibition		UL(Ur	Unlock) Enable parameter change					
			L(Locł	L(Lock) Disable parameter change					
P88	Software	-	Display inverter software version. Refer to				-	Х	
	version		manua	manual version.					

8. Control Block Diagram


8.1 Control Flow

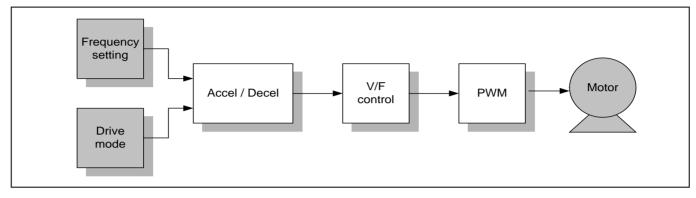

8.2 Frequency Setting & Drive Mode Setting

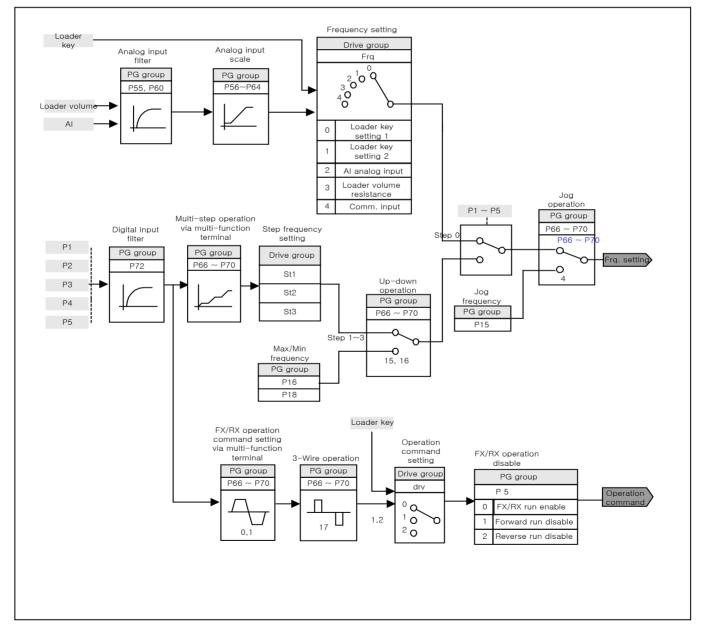

8.3 Frequency Setting, Drive Acc./Dec. Setting and V/F Voltage Control

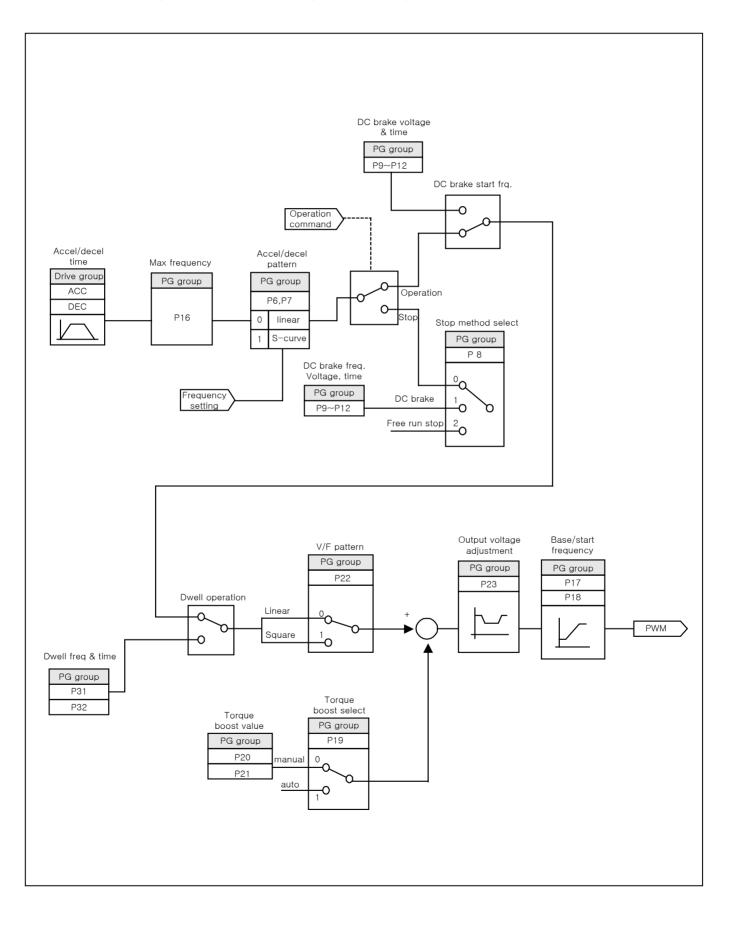

9. Basic Functions

9.1 Frequency Setting

Loader Digital Frequency Setting1


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	0.00	Frequency command	-	0 ~ 200	0.0	Hz
	Frq	Frequency mode	0	0 ~ 4	0	

- Set Frq [Frequency mode] to 0.
- Set the desired frequency in 0.00 and press FUNC key to enter the value into memory.
- The value is settable less than the max. frequency(P16).

Loader Digital Frequency Setting2

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	0.00	Frequency command	-	0 ~ 200	0.0	Hz
	Frq	Frequency mode	1	0 ~ 4	0	


- Set Frq [Frequency mode] to 1.
- □ In 0.00, frequency is changed upon pressing the Up (▲)/Down (▼) key. In this case, UP/Down keys serve as volume resistance.
- The value is settable less than the max. frequency(P16).
- •Using Loader's volume resistance(run in case of Frq: 3)
 - SV-iE5 series basically offer volume resistance on the inverter's loader for frequency command. Through this volume resistance, it supplies 0~5 V and enables frequency setting. At the moment, voltage input is indicated as input value.
 - Loader volume is getting larger as it rotates clockwise.

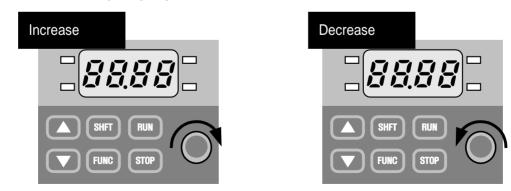


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	0.0	Frequency Command	-	-	-	Hz
	Frq	Frequency setting mode	3	0 ~ 4	0	
PG Group	P60	Filter time constant for V1 input	10	0 ~ 9999	10	
	P61	V1 input Min voltage	-	0 ~ 100	0	%
	P62	Frequency corresponding to IP61	-	0 ~ 200	0.00	Hz
	P63	V1 input max voltage	-	0 ~ 100	100	%
	P64	Frequency corresponding to P63	-	0 ~ 200	60.00	Hz

•Frequency setting with the loader's volume resistant	ce(V0)

- Select 3 in Frq code of Drive group
- □ It is possible to monitor frequency setting in Command Frequency Code(0.0) of Drive Group.
 - P60(Filter time constant for NV input): Effective for eliminating noise in the frequency setting circuit. Increase the filter time constant if steady operation cannot be performed due to noise. A larger setting results in slower response (t gets longer).

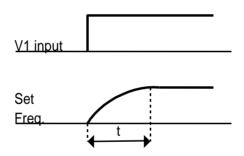

- ▶ P61 ~ P64: Setting input range and corresponding frequency to -10V ~ 0V V1 input voltage.
- When minimum (-) input voltage is -2V with corresponding frequency 10Hz and Max voltage is -8V with run freq. 50Hz.

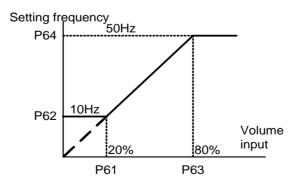

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	0.0	Frequency Command	-	-	-	Hz
	Frq	Frequency setting mode	2	0 ~ 4	0	
PG Group	P55	Input filter time constant for AI	10	0 ~ 9999	10	
	P56	Min. input for AI(V/I)	-	0 ~ 100	0	%
	P57	Frequency corresponding to P56	-	0 ~ 200	0.00	Hz
	P58	Max. input for AI (V/I)	-	0 ~ 100	100	%
	P59	Frequency corresponding to P58	-	0 ~ 200	60.00	Hz

 
• Frequency setting using AI(analogue input) terminal

- Select 2 in Frq code of Drive group.
- It is possible to use by inputting 0 ~ 10V in an external control or connecting variable resistance to VR,AI,CM terminals of the inverter.
 - Inverter terminal may be wired as follows and see page 9-2 for the functions of P55 through P59.
 - Depending on AI selection switch beside the inverter's control terminal as V, I, it is possible to select one of voltage input and current input.


Caution


For AI selection, set it accurately according to the current input and voltage input. Incorrect setting may cause the inverter troubled.

In the below, switch direction is colored in black.




 
1) Using CI

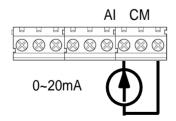



  2) Using Ex. voltage






3) Using V.R

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	Frq	Frequency setting mode	2 ~ 3	0 ~ 4	0	
PG Group	P66	Multi-function input terminal P1 select	-	0 ~ 24	0	
	~	~				
	P70	Multi-function input terminal P5 select	22		4	

•Analogue frequency command fixed

- ☐ If Frq code of Drive Group is 2~3, it works.
- Select a terminal to use as analogue frequency command fixed signal among multi-function input terminals(P1 ~ P5).
 - It works as shown in the below figure if using P5 terminal.

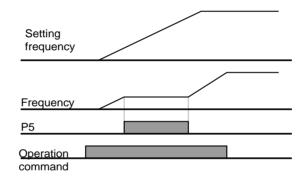

9.2 Multi-Step Frequency Setting

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	0.0	Frequency command	5.0	0 ~ 200	0.0	Hz
	Frq	Frequency setting mode	0	0 ~ 4	0	-
	St1	Multi-step freq.1	-	0 ~ 200	10.0	Hz
	St2	Multi-step freq.2	-		20.0	
	St3	Multi-step freq.3	-		30.0	
PG Group	P68	Multi-function input terminal P3 define	5	0 ~ 24	2	-
	P69	Multi-function input terminal P4 define	6		3	-

- Select a terminal to give Multi-step frequency command among P1-P5 terminals.
- ☐ If terminals P3-P4 are selected, set P68-79 to 5 6 to give Multi-step frequency command.
- Multi-step frequency 0 is settable in [Frequency mode] and [Frequency command(0.0)].
- ☐ Multi-step frequency 1-3 are set at St1-St3 in Drive group.

FX/

RX

✓

✓

✓

✓

Ρ4

-

-

√

✓

Ρ3

-

√

-

✓

Spee


d

0

1

2

3

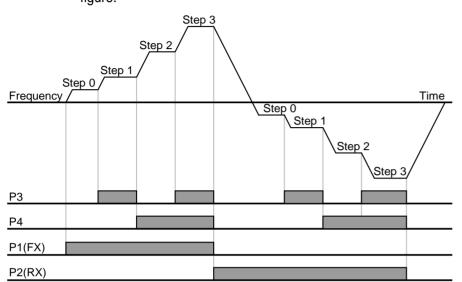

If running by using multi-step high/low, it is possible to run from 0 to 3 step in 4 combinations as the below figure.


9.3 Operating command setting method

•Operation by RUN key and STOP/RST key of the loader

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	drv	Drive mode	0	0~3	1	
	drC	Motor rotation direction select	-	F, r	F	

- Set drive code of Drive Group to 0.
- Acceleration is started upon pressing the Run key while operating frequency is set. Motor decelerates to stop by pressing the STOP/RST key.
- Selecting rotation direction is available at drC [Direction of motor rotation select] when operating command is set to 0.

drC	Direction of motor	F	Forward
	rotation select.	r	Reverse

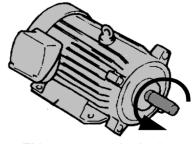


FX : counter clockwise

 Operating command via 	a FX,	RX terminal
---	-------	-------------

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	drv	Drive mode	1	0 ~ 3	1	
PG Group	P66	Multi-function input terminal P1 define	0	0 ~ 24	0	
	P67	Multi-function input terminal P2 define	1	0 ~ 24	1	


- Set drv code of Drive Group to 1.
- Set P667 and P67 to 0 and 1 to use P1 and P2 as FX and RX terminals.
- - ▶ □ Motor is stopped when FX/RX terminal is ON/OFF at the same time.

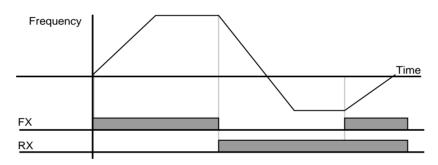

•Operating command via FX, RX terminal 2

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	drv	Drive mode	2	0~3	1	
PG Group	P66	Multi-function input terminal P1 define	0	0 ~ 24	0	
	P67	Multi-function input terminal P2 define	1	0 ~ 24	1	

- Set drv code of Drive Group to 2.
- Set P66 and P67 to 0 and 1 to use P1 and P2 as FX and RX terminals.
- FX: Operating command setting. Motor runs in forward direction when RX terminal is OFF.
- □RX: Direction of motor rotation select. Motor runs in reverse direction when RX terminal is ON.

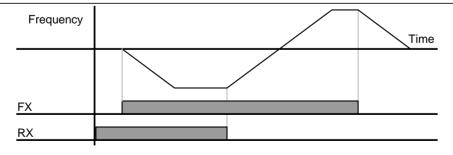

●FX/RX Run Disable

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	drC	Direction of motor rotation select	-	F, r	F	
PG Group	P 5	Forward/Reverse run disable	-	0~2	0	

- Select the direction of motor rotation.
- 0: Forward and Reverse run enable
- 1: Forward run disable
- 2: Reverse run disable


Power On Start select

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	drv	Drive mode	1, 2	0 ~ 3	1	
PG Group	P34	Power on start select	1	0 ~ 1	0	

- □ Set P34 to 1
- When AC input power is applied to the inverter with drv set to ON, motor starts acceleration.
- ☐ It is inactive when it is operated by RUN key.



Particular attention must be directed to this function due to potential hazard as motor starts to run suddenly upon applying AC input power.

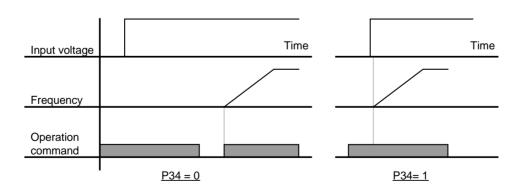


Restart after fault reset

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	drv	Drive mode	1, 2	0 ~ 3	1	
PG Group	P35	Restart after fault reset selection	1	0 ~ 1	0	

- Set P35 code to 1
- When AC input power is applied to the inverter with drv set to ON, motor starts acceleration.
- It is inactive when it is operated by RUN key

A Caution

Particular attention must be directed to this function due to potential hazard as motor starts to run suddenly after the fault is cleared.

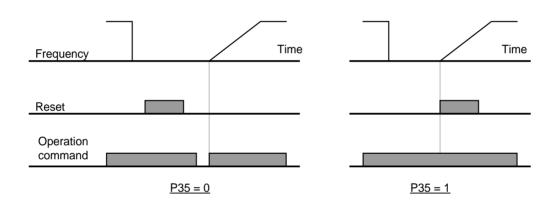

9.4 Accel/Decel time and pattern setting


• Accel/Decel time setting based on Max frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	ACC	Accel time	-	0 ~ 6000	5.0	Sec
	dEC	Decel time	-	0 ~ 6000	10.0	Sec
PG Group	P16	Max. freq.	-	0 ~ 200	60.0	Hz

■ Set the desired Accel/Decel time at ACC/dEC in Drive group.

Accel/decal time means the time accelerating/decelerating from starting frequency up to max. frequency and it forms a pattern of accel/decel time with the max. frequency. Therefore, the slope of same accel/decel pattern within a constant max. frequency is uniform regardless of target frequency.

 Accel/Decel time is set based on max. frequency and 0Hz. For instance, if it is set max. frequency to 60Hz, Accel/Decel time to 5 sec, and run frequency to 30Hz, time to reach 30Hz would be 2.5 sec.

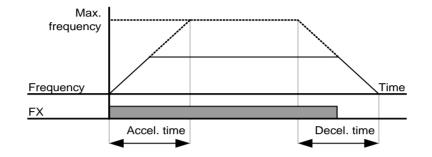


Accel/Decel pattern setting

Group	Code	Parameter Name	Setting		Range	Initial
PG Group	P 6	Accel pattern	0	Linear pattern run	0	
	Ρ7	Decel pattern	1	S-shape pattern run		

- Accel/decel patterns may be set in P6 and P7 codes of PG Group, respectively.
- Linear pattern operation: Output frequency linearly increases or decreases at uniform incremental
- S-shape pattern run: Used for applications needing smoothing acceleration/deceleration such as conveyor or elevator door.


Note

In case of S-shape pattern runs, the accel/decel time is longer than that set by a user. Use linear pattern run in case of application needing accurate accel/decel time.

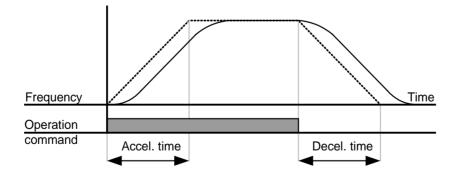

Note


If the target frequency is less than 40% of the max. frequency as below figure, it may not realize a complete sshape pattern run with the ending partially cut.

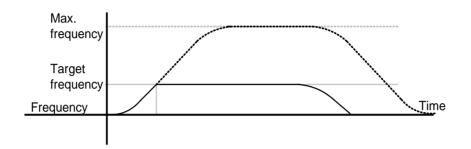

Accel/Decel Disable

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P66	Multi-function input terminal P1 define	-	0 ~ 24	0	
	~	~				
	P70	Multi-function input terminal P5 define	23		4	

- □ Select one terminal among Multi-function input terminals P1-P5 to define Accel/Decel disable.
- ☐ If P5 is selected, set P70 to 23 to activate this function.

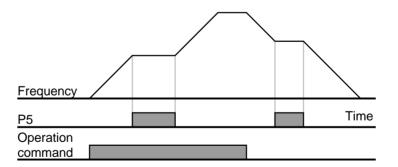


9.5 V/F Control

●Linear V/F pattern operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P17	Base frequency	-	30 ~ 200	60.0	Hz
	P18	Start frequency	-	0.1 ~ 10	0.5	Hz
	P22	V/F pattern	0	0 ~ 1	0	


- Set P22 code to 0(linear)
- ☐ This pattern maintains a linear volts/frequency ratio by voltage/frequency(V/F).
 - Base frequency: Inverter outputs its rated voltage at this level. Enter the motor nameplate frequency.
 - Start frequency: Inverter starts to output its voltage at this level.

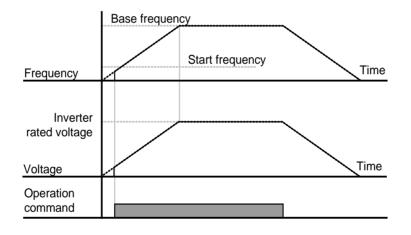

● Square V/F pattern

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P22	V/F pattern	1	0 ~ 1	0	


- Set P22 code to 1
- ☐ This pattern maintains squared volts. Appropriate applications are fans, pumps, etc

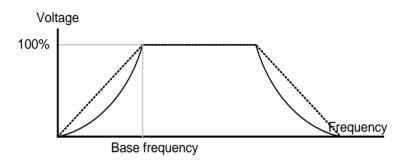

- In the Squared V/F pattern, to secure operation torque, it is practically realized with approximate value to 1.4 squared.
- •Output voltage adjustment

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P23	Output voltage adjustment	-	40 ~ 110	100	%


• This function is used to adjust the output voltage of the inverter. This is useful when you use a motor that has a rated voltage lower than the input voltage

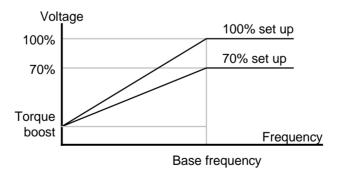


Manual torque boost

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P19	Torque boost select	0	0 ~ 1	0	
	P20	Torque boost in forward direction	-	0 ~ 15	5	%
	P21	Torque boost in reverse direction				

- Set P19 code of PG Group to 0(manual torque boost).
- The values of [Torque boost in forward/reverse direction] are set separately in P20 and P21.

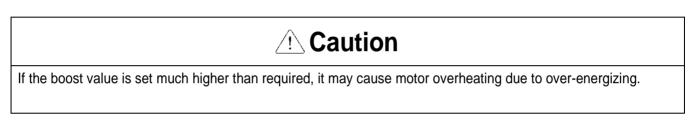

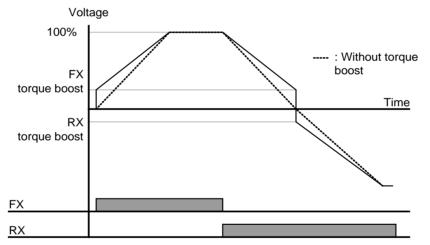

•Auto torque boost

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P19	Torque boost select	1	0 ~ 1	0	
PG Group	P44	No load motor current	-	0.1 ~ 25.5	-	А


- Set P19 code of PG Group to 1(auto torque boost).
- □ Inverter automatically calculates torque boost value using motor parameters and outputs the corresponding voltage.

9.6 Stop method select

Decel to stop	
---------------	--

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P 8	Stop mode select	0	0 ~ 2	0	

- Set P8 code of PG Group to 0.
- Motor decelerates to 0 Hz and stops during the setting time.

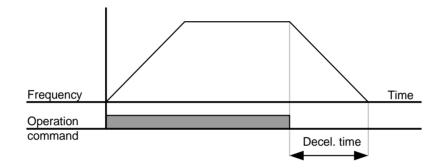

•DC braking to stop


Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P 8	Stop mode select	1	0 ~ 2	0	

- □ Select 1(DC brake to stop) in P8 code of PG Group.
- □ Refer to page 10-1.

•Free run stop

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P 8	Stop mode select	2	0 ~ 2	0	

- Select 2(Free run stop) in P8 code of PG Group.
- □ When operating command is turned OFF, Output Frequency and voltage are shut down.

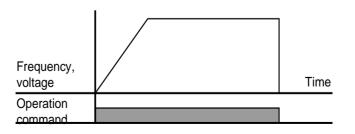


9.7 Frequency limit

• Frequency limit using Max Frequency and Start Frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P16	Max frequency	-	0 ~ 200	60.0	Hz
	P18	Start frequency	-	0.1 ~ 10	0.5	Hz

- ☐ Max Frequency: Every frequency but P17(base frequency) has upper limit of frequency parameter. Therefore, any frequency cannot be set above the max. frequency.
- Start Frequency: Every frequency but P17(base frequency) has lower limit of frequency parameter.. If a frequency is set lower than this, 0.00 is automatically set.
- Max frequency is the reference frequency serving as the criteria of accel/decel time as well as upper limit.
 Once max. frequency is changed, accel/decel slope may be changed accordingly.

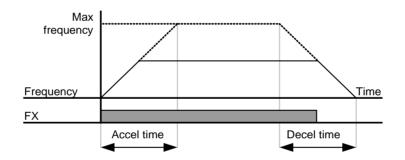

ΜΕΜΟ	

10. Advanced Functions

10.1 DC Brake


• Stopping motor by DC brake

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P 8	Stop mode select	1	0 ~ 2	0	
	P 9	Dc brake start frequency	-	0 ~ 60	5.0	Hz
	P10	DC brake wait time	-	0 ~ 60	0.1	sec
	P11	DC brake voltage	-	0 ~ 200	50	%
	P12	DC brake time	-	0 ~ 60	1.0	sec

- Select 1 in P8 code(DC brake stopping) of PG Group
- □ P 9 : The frequency at which the DC brake will become active
- P10 : Inverter output will hold for this time before applying DC brake voltage.
- □ P11 : Set this value as a percent of Motor rated current.
- P12 : Sets the time for DC brake voltage to be applied to the motor.

▲ Caution

If excessive DC Brake voltage is set or DC Brake time is set too long, it may cause motor overheating and damage to the motor.

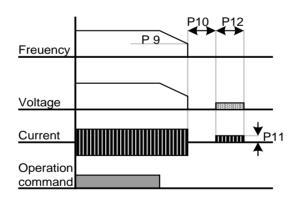


- Setting F11 or F12 to 0 will disable DC brake.
- ► DC Brake Wait time: When load inertia is large, DC brake start frequency is high or excessive DC voltage is allowed to motor, over current trip may occur. It can be prevented using P10 before starting DC brake.

Starting DC brake

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P13	DC brake start voltage	-	0 ~ 200	50	%
	P14	DC brake start time	-	0 ~ 60	0	sec

- □ P13 : It sets the level as a percent of Motor rated current.
- P14 : Motor accelerates after DC voltage is applied for the set time.

If excessive DC Brake voltage is set or DC Brake time is set too long, it may cause motor overheating and damage to the motor.

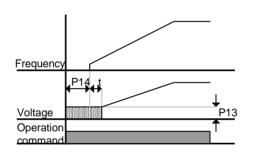

- ▶ □ Setting P13 or P14 to 0 will disable Starting DC brake.
- ▶ □ t : After P14, the frequency starts accelerating.


•DC brake at a stop

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P13	DC brake start voltage	-	0 ~ 200	50	%
PG Group	P68	Multi-function input terminal P3 function select	11	0 ~ 24	2	

- P13 : It sets the level as a percent of Motor rated current.
- Select a terminal to issue a command of DC brake at a stop among P1 to P5.
- ☐ If P3 terminal is set for this function, set P68 to 11(DC brake at a stop).



If excessive DC Brake voltage at a stop is set or DC Brake time is set too long, it may cause motor overheating and damage to the motor.

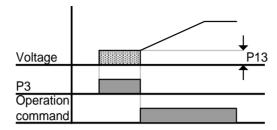



10.2 Jog operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P15	Jog frequency	-	0 ~ 200	10.0	Hz
PG Group	P68	Multi-function input terminal P5 select	4	0 ~ 24	2	

■ □ Set a desirable jog frequency in P15 of PG Group.

 - Select a terminal from P1 P5 to use for this setting
- ☐ If P3 is set for Jog operation, set P68 to 4(Jog operation).
- □ Jog frequency can be set within Max frequency(P16) and Start frequency(P18).



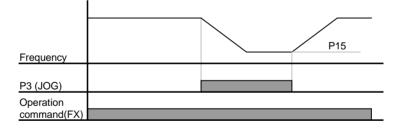



- Jog operation overrides all other operations except Dwell operation. Therefore, if Jog frequency command is entered in the middle of Multi-Step, Up-Down or 3-wire operation, operation is executed at Jog frequency.
- > The above diagram shows an example when Multi-function input is set to NPN mode.

10.3 UP – DOWN operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P66	Multi-function input terminal P1 select	0	0 ~ 24	0	
	P68	Multi-function input terminal P3 select	24		2	
	P69	Multi-function input terminal P4 select	15		3	
	P70	Multi-function input terminal P5 select	16		4	

- Select terminals for Up-Down operation from P1-P5.
- If P4 and P5 are selected for Up-Down operation terminals, set P69 and P70 to 15(Frequency Up command) and 16 (Frequency Down command), respectively.

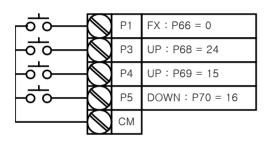


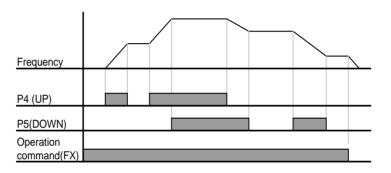

 Up/down Save function: If P29, 'Save up/down frequency', is set to 1, the frequency before the inverter was stopped or decelerated is saved in P30.

P29	Save up/down frequency	0	Remove 'save up/down frequency'
	select	1	Set 'save up/down frequency'
P30	Save up/down frequency	Up/down frequency saved	


- The Up/down frequency can be initialized by setting of the multi-function input terminal as 'Up/Down Save Frequency Initialization'.
- If 'Up/Down Save Frequency Initialization' signal is input while the multi-function input 'Up' or 'Down' function is applied, this signal is ignored.

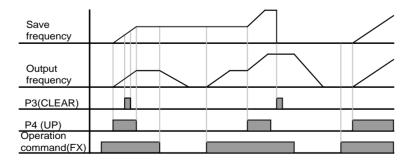

10.4	3-Wire	operation
------	--------	-----------

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P66	Multi-function Input terminal P1 select]	0	0 ~ 24	0	
	~	~				
	P70	Multi-function Input terminal P5 select	17		4	

- Select a terminal from P1-P5 for use as 3-Wire operation.
- ☐ If P5 is selected, set P70 to 17(3-Wire operation).

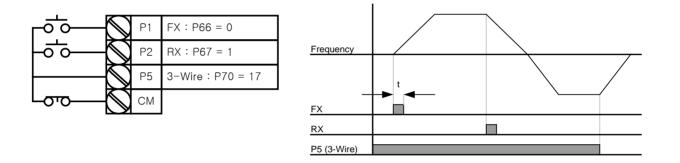

- Input signal is latched (saved) in 3-Wire operation. Therefore, inverter can be operated by Push-button switch.
- The bandwidth of pulse (t) should not be less than 50msec.

10.5 Dwell operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P31	Dwell frequency	-	0 ~ 200	5.0	Hz
	P32	Dwell time	-	0 ~ 10	0.0	sec

- In this setting, a motor begins to accelerate after dwell operation is executed for dwell time at the specified dwell frequency.
- [] It is mainly used to release mechanical brake in elevators after operating at dwell frequency.
 - Dwell frequency: This function is used to output torque in an intended direction. It is useful in hoisting applications to get enough torque before releasing a mechanical brake. Rated Slip frequency is calculated by the formula shown below.

$$f_s = f_r - \left(\frac{rpm \times P}{120}\right)$$

where, f_s = rated slip frequency

 
 f_r = rated frequency

rpm = motor nameplate rpm

P = no. of motor poles

i.e.) rated frequency: 60Hz, rated rpm: 1740rpm, No. of poles: 4

$$f_s = 60 - \left(\frac{1740 \times 4}{120}\right) = 2Hz$$



10.6 Slip Compensation Control

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P40	Motor type select	-	0.1 ~ 0.4	-	
	P41	No. of motor poles	-	2 ~ 12	4	
	P42	Rated slip frequency	-	0 ~ 10	-	Hz
	P43	Motor rated current	-	0.0 ~ 25.5	-	А
	P44	Motor no load current	-	0.0 ~ 25.5	-	А
	P46	Control mode select	1	0 ~ 2	0	

- Set P46 to 1(Slip compensation control).
- This function enables the motor to run in constant speed by compensating inherent slip in an induction motor.

▶ P46 : Set the motor type connected to the inverter output side.

P46	Motor type select	0.1	0.1kW
		0.2	0.2kW
		0.4	0.4kW

- > P41 : Enter the pole number on the Motor nameplate.
- > P42 : Enter the slip frequency in accordance with the following formula and motor nameplate.

$$f_s = f_r - \left(\frac{rpm \times P}{120}\right)$$

where, f_s = rated slip frequency

 f_r = rated frequency

rpm = motor rated rpm

P = motor pole number

i.e.) rated freq. : 60Hz, rated rpm: 1740rpm, poles: 4


$$f_s = 60 - \left(\frac{1740 \times 4}{120}\right) = 2Hz$$

 Motor function codes per motor type are summarized as follows. Enter motor parameter if any change is required.

Motor type [kW]	Rated current [A]	No load current [A]	Rated slip frequency [Hz]
0.1	0.6	0.4	2.0
0.2	1.1	0.7	2.33
0.4	1.8	1.2	3.00

• Factory defaults per motor type

- ▶ P43 : Enter the motor nameplate rated current.
- P44 : Enter the measured current when the motor is running at rated frequency after the load is removed. Enter 50% of the rated motor current when it is difficult to measure the motor no load current.
- Induction motor has a large difference between motor rated rpm and frequency(synchronous speed) depending on load rate. Therefore, it is recommended to use slip compensation control to reduce the difference.
- Set torque boost within 2% for slip compensation operation. Excessive torque boost may cause a huge error in slip speed because motor may get overexcitation in low speed.

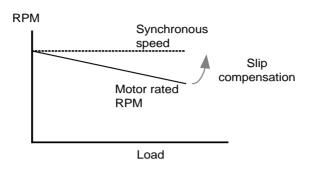


10.7 PI Control

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P46	Control mode select	2	0 ~ 3	0	-
	P47	P gain for PI controller	-	0 ~ 999.9	300.0	%
	P48	Differential time for PI controller(I gain)	-	0.1~ 32.0	1.0	sec
	P50	Feed forward gain for PI controller		0 ~ 999.9	0	%
	P51	PI output frequency upper limit	-	0 ~ 200	60.0	Hz
	P52	PI output frequency lower limit		0 ~ 200	0.5	Hz
	P66~	Multi-function input terminal P1 ~ P5	20	0~24	_	
	P70	define	20	0~24	-	-

- Set P46 to 2(PI control).
- Output frequency of the inverter is controlled by PI control for use as constant control of flow, pressure or temperature.
 - P47 : Set the percentage of output to error. If P Gain is set to 50%, 50% of the error value will be output. Higher value can reach the target control value faster but it may cause oscillation.
 - P48 : Set the time to output the accumulated error value. Set the time required to output 100% when the error value is 100%. If differential time is set to 1 second and error is 100%, it outputs 100% in 1 second. If the value is reduced, response will be faster but setting too low may lead to controller oscillation.
 - > P50 : Set the gain to add the target value to the PI controller output.
 - > P51, P52 : It limits the output of the PI controller.
 - ▶ P66 ~ P70 : To exchange PI to normal operation, set one of P1-P5 terminal to 20 and turn ON.

Chapter 10. Advanced Functions

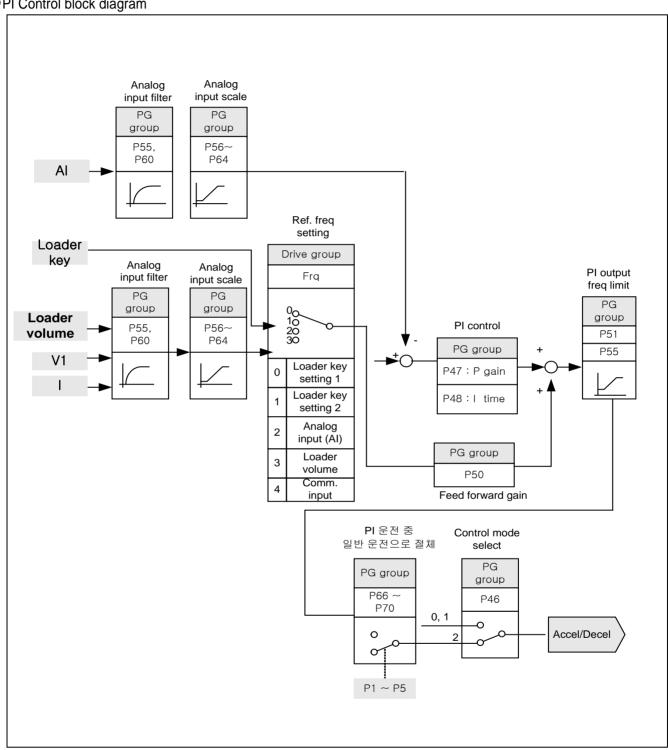

10.8 Speed search operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P36	Speed search select	-	0 ~ 15	0	
	P37	Speed search current level	-	80 ~ 200	100	%
	P77	Multi-function relay	15	0~20	17	


- Used to avoid any possible fault when the inverter outputs the voltage during operation after the load is removed
- □ The inverter estimates the motor rpm based on output current. Therefore, detecting exact speed is difficult.

The following	table shows 4	4 types of	Speed search selection.

P36	Speed		Speed search	Speed search	Speed search	Speed search
	search		during P34(power	during instant	during P35(restart	during
		Set	on start)	power failure	after fault reset)	acceleration
				restart		
			bit 3	bit 2	bit 1	bit 0
		0	-	-	-	-
		1	-	-	-	\checkmark
		2	-	-	✓	-
		3	-	-	✓	\checkmark
		4	-	✓	-	-
		5	-	✓	-	✓
		6	-	✓	✓	-
		7	-	✓	✓	\checkmark
		8	✓	-	-	-
		9	✓	-	-	\checkmark
		10	✓	-	✓	-
		11	✓	-	✓	\checkmark
		12	✓	✓	-	-
		13	✓	✓	-	\checkmark
		14	✓	✓	\checkmark	-
		15	\checkmark	~	\checkmark	\checkmark

▶ P37 : Limits current during Speed search. Set as the percent of P43.

▶ P77 : Signal of active Speed search is given to external sequence via multi-function relay output (30AC).

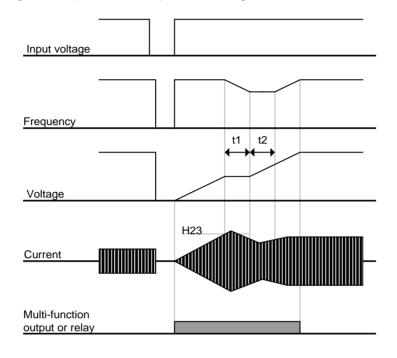


The followings show speed search operation during Instant Power Failure restart

- When the input power is cut off due to instant power failure, the inverter outputs Low voltage trip (LV) to hold the output.
- When the power is restored, the inverter outputs the frequency before the low voltage trip and the voltage is increased due to PI control.
- If current is increasing over the preset level in P37, the rise in voltage will stop and the frequency is decreased.
- If current lowers than the level set in P37, the increase in voltage starts again and the decrease in frequency stops decelerating.
- When the frequency and voltage are restored back to the nominal level, acceleration will continue at the frequency before trip.
 - Speed search operation is suitable for loads with high inertia. Stop the motor and restart when friction in the load is high.
 - SV-iE5 series keeps normal operation when power is restored in 15msec for the use of its inverter rating if it operates within the rated output(0.1kW, 0.2kW and 0.4kW inverter types).
 - Inverter DC link voltage can vary depending on output load quantity. Therefore, Low Voltage trip(Lvt) may occur when instant power failure is maintained over 15msec or output is higher than its rating.
 - ▶ Instant power failure specification is applied when input voltage to Inverter is 200~230V AC.
 - Adjust P37(speed search current level) in accordance with motor inertia to accelerate without trip by detecting idle rotation speed quickly, when operation characteristics would be improved if accurately entering motor no load current.

10.9 Auto Restart Operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P38	No. of auto restart try	-	0 ~ 10	0	
	P39	Auto restart time	-	0 ~ 60	1.0	sec

- Set the frequency of auto restart activated in P38.
- Used to avoid system down, which is caused by internal protection function activated by causes such as noise.
 - P38 : If run command is entered after trip as inverter prevention function is active, it automatically restarts in the time set in P39. Auto restart will become active after the P38, which is reduced by 1 when it is active. If the trip outnumbers the preset restart try, auto restart function is deactivated. If the setting is reset via the control terminal or the STOP key on the loader, the number of auto restart try set by user is automatically entered.
 - If there is no more trip for 30 sec after Auto restart operation, it increases the preset auto restart value reduced in the inverter.
 - When operation is stopped due to Low voltage {Lvt} or Emergency stop {EST}, Inverter Overheat {Oht}, and Hardware Trip {HWt}, Auto restart will be deactivated.
 - After the auto restart time set in P39, the motor starts acceleration automatically via speed search.
 - The following pattern is shown when the number of auto restart try is set to 2.

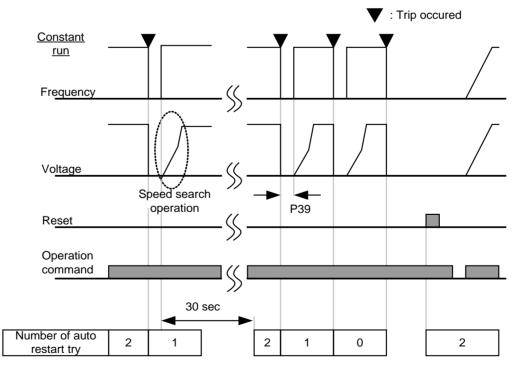

10.10	Operation	Sound	Select	(carrier	frequency	/ change)
-------	-----------	-------	--------	----------	-----------	-----------

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P45	Carrier frequency select	-	0 ~ 15	3	

- Set the operating sound of the inverter.
 - Operating sound affects the following advantages/disadvantages.

P45	When setting carrier frequency	Motor sound reduced
	high	Inverter heat loss increased
		Inverter noise increased
		Inverter leakage current increased

iE5 series are designed to monitor the temperature of the inverter's cooling coil(heat sink) in order to automatically adjust carrier frequency in overheating condition. If it is necessary to use high carrier, select inverter type considering ambient temperature and motor load.

10.11 Parameter initialize/Lock

• Parameter initialize

Group	Code	Parameter Name	Setting		Range
PG Group	P85	Parameter initialize	0	-	0
			1	Groups initialize	
			2	Drive group initialize	
			3	PG group initialize	

- Select the group to be initialized and perform it in P85 code.
 - It displays P85 after initialization value is entered in P85 code and initialization is complete by pressing FUNC key.

Password register

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P86	Password register	-	0 ~ FFFF	0	
	P87	Parameter lock	-	0 ~ FFFF	0	

- Register password for parameter lock(P87).
- Password should be hex decimal(0 ~ 9, A, B, C, D, E, F).

Caution

Use the registered password to cancel parameter lock again after setting parameter lock of P86 using the registered password. Therefore, a user should memorize the registered password. If forgetting the password, you need to get after-sales service.

- Follow the steps to register password.
- If password is already set, it is necessary to enter the present password instead of 0000 in step 2.

No.	Display	Description
1		Move to P86.
I	° 85	Pressing FUNC key shows 0000.
		Enter the present password and press FUNC key. The factory default password
2		is 0000.
		Press FUNC key.
3		Register new password(i.e.: A123)
3		If pressing FUNC key, A123 blinks.
4		Press FUNC key.
5	- P 85 -	New password is saved.

If the present password is incorrectly entered in step 2, it may not go to step 3. Do not forget the registered password.

Parameter lock

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P87	Parameter lock	-	0 ~ FFFF	0	
	P86	Password register	-	0 ~ FFFF	0	

• Parameter may be protected by using password.

• Parameter lock is realized by using the password registered in P86.

No.	Display	Description
1	" <i>P 87</i> "	Move to P87.
I		Pressing FUNC key shows UL(unlock).
		Display whether or not function code is changeable.
2		UL(unlock) shows that function code is changeable.
		Press FUNC key.
3		Indicating 0000, the present password entry window is displayed.
3		Enter the present password(i.e.: A123).
4		Press FUNC key.
		If password is correct, it is changed to L(lock); if incorrect, it shows UL(unlock)
-		again.
5		Function code is locked.
		Press FUNC key.
	- P 87 -	Initial menu is displayed.

 If the present status is 'lock' in step 2, it shows L(lock); to cancel it, enter the present password, changing it to UL(unlock).

ΜΕΜΟ

٦

11. Monitoring

11.1 Operating Status Monitoring

Output current

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	CUr	Output current	-			

Inverter output current can be monitored in CUr code.

Motor RPM

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	rPM	Motor RPM	-			
PG Group	P41	No. of motor poles		2 ~ 12	4	
	P46	Control mode select	-	0 ~ 2	0	
	P54	Gain for motor rpm display	-	1 ~ 1000	100	%

■ ☐ Motor rpm can be monitored in rpm code of Drive Group.

When P46 is set to 0(V/F control) or 1(PID control), the Inverter output frequency (f) is displayed in RPM using the formula below without Motor slip considered

$$RPM = \left(\frac{120 \times f}{P41}\right) \times \frac{P54}{100}$$

- ▶ P41 : Enter the number of rated motor poles on the nameplate.
- > P54 : Enter gear ratio to monitor mechanical rotation, instead of rotation of motor axis.

•Inverter DC link voltage

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	dCL	Inverter DC link voltage	-			

- □ Inverter DC link of input voltage can be monitored in dCL.
 - ▶ √2 times(1.414) the value of input voltage is displayed while motor is at a stop. This is why it is converted to DC voltage, the maximum of AC voltage by a rectifier.
 - It is the voltage between P1 on the inverter's power terminal and N terminal.

User display select

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	vOL	Output voltage display	-			

• It displays the current inverter output voltage.

• Power on display

Group	Code	Parameter Name	Rang	e	Default
PG Group	P53	Power on display	0	Frequency command(0.0)	0
			1	Accel time(ACC)	
			2	Decel time(DEC)	
			3	Drive mode(drv)	
			4	Frequency mode(Frq)	
			5	Multi-step frequency 1	
			6	Multi-step frequency 2	
			7	Multi-step frequency 3	
			8	Output current (CUr)	
			9	Motor rpm(rPM)	
			10	Inverter DC link voltage	
			10	(dCL)	
			11	Output voltage (vOL)	
			12	Fault display 1	
			13	Operating display select	
			14	Output current	
			15	Motor rpm	

• Display the parameters set in P53 when power on.

• The output current and motor rpm are displayed directly when P53 is set 14,15.


11.2 Monitoring I/O Terminal

Input terminal status monitoring

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P71	Input terminal status display	-			

• Current input terminal status (ON/OFF) can be monitored in P71.

• The following is displayed when P1, P3, P4 are ON and P5 is OFF.

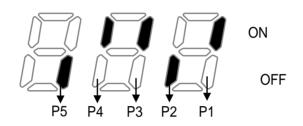

11.3 Monitoring Fault Condition

Monitoring Current Fault Status

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive Group	nOn	Current fault display	-			

- Fault occurred during operation is displayed in nOn
- □ Up to 3 kinds of faults can be monitored.
 - This parameter gives information on fault types and the operating status at the time of the fault in good order of fault type -> frequency -> current -> accel/decel. Refer to Page 5-10 for keypad setting.

Fault types	Frequency	30.00	
	Current	12.5	
	Accel/decel information		Fault during accel
		dEL	Fault during decel
		5 <i>t d</i>	Fault during constant run
		5217	Fault at a stop


• Refer to Page 13-1 on fault types.

 Fault history 	monitoring
-----------------------------------	------------

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P 1	Fault history 1	-			
	P 2	Fault history 2				
	P 3	Fault history 3				
	P 4	Reset fault history	-	0 ~ 1	0	

■ □ P 1 ~ P 3: Up to 3 faults information is stored.

- □ P 4: Previous fault information stored in the code P1 thru P3 is all cleared.
 - When a fault occurs during operation, it can be monitored in the nOn.
 - When the fault condition is reset via the STOP/RST key or multi-function terminal, information displayed in the nOn will be moved to P1. In addition, the previous fault info stored in P1 will be automatically moved to P2. Therefore, the latest update fault info will be stored in the lowest history number.
 - When more than 1 fault occurred at the same time, up to 3 types of faults will be stored in one code.

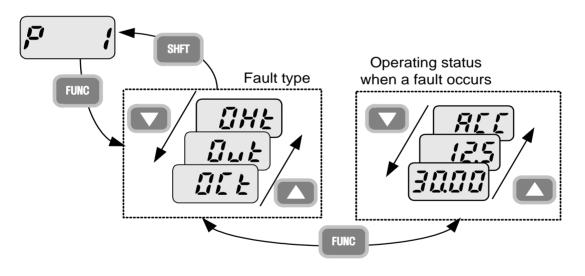

Note

Among faults displayed, ESt(emergency stop) and Lvt(low voltage trip) are not stored in fault history.

11.4 Analogue output


Group	Code	Parameter Name	Setting	Range	Initial	Unit	
PG Group	P73	Analogue output item select	-	0 ~ 3	0		
	P74	Analogue output level . adjustment		-	10 ~ 200	100	%

• Output item and the level from the AM terminal are selectable and adjustable.

P73	Analogue	output	item			Item corresponding to 10V
	select			0	Output frequency	Max. frequency(P16)
				1	Output current	150% of inverter rated current
				2	Output voltage	282Vac
				2	Inverter DC link	400)/da
				3	voltage	400Vdc

▶ P73 : The selected item will be output to Analog output terminal (AM).

 ▶ P74 : If you want to use analog output value as a gauge input, the value can be adjustable according to various gauge specifications.



PG 0 FDT-1 Group 1 FDT-2 2 FDT-3 3 FDT-4 4 FDT-5	17
2 FDT-3 3 FDT-4	
3 FDT-4	
4 FDT-5	
5 -	
6 Inverter overload(IOL)	
Multi-function 7 Motor stall(STALL)	
P77 output 8 Over voltage trip(Ovt)	
terminal 9 Low voltage trip(Lvt)	
select 10 Inverter overheat(OHt)	
11 Command loss	
12 During run	
13 During stop	
14 During constant run	
15 During speed searching	
16 Wait time for run signal input	
17 Fault output	
	low
	trip
auto restart tries) trip occurs occurs	
Set bit 2 bit 1 bit 0	
0	2
P78 Fault relay 1 ✓	
output 2 - 🗸 -	
3 - 🗸 🗸	
4 🗸	
5 🗸 - 🗸	
6 🗸 🖌 -	

11.5 Multi-function output terminal and Relay

• Select the desired item to be output.


P78 : When 17(Fault display) is selected in P77, Multi-function output relay will be activated with the value in P78.

•0 : FDT-1

- Check whether the output frequency matches the user-setting frequency.
- Active condition: Absolute value (preset frequency output frequency) <= Frequency Detection Bandwidth / 2

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P76	Detected frequency bandwidth	-	0 ~ 200	10.0	Hz

- Can not be set above max. frequency(P16).
 - ▶ When setting P76 to 10.0.

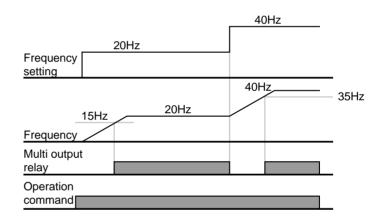

•1 : FDT-2


• Activated when the preset frequency

matches frequency detection level (P75) and FDT-1 condition is met.

Active condition: (Preset frequency = FDT level) & FDT-1

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P75	Detected frequency	-	0 ~ 200	30.0	Hz
	P76	Detected frequency bandwidth	Detected frequency bandwidth -		10.0	

- Cannot be set above Max frequency (P16).
 - When setting P75 and P76 to 30.0 Hz and 10.0 Hz, respectively

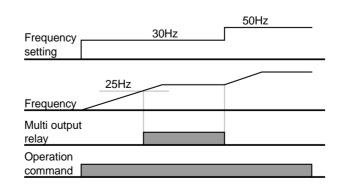


●2 : FDT-3

- Activated when run frequency meets the following condition.
- ▶ Active condition: Absolute value (detected frequency run frequency) <= detected frequency Bandwidth/2

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P75	Detected frequency	-	0 ~ 200	30.0	Hz
	P76	Detected frequency bandwidth	-		10.0	

Can not be set above max. frequency(P16).

 When setting P75 and P76 to 30.0Hz and 10.0 Hz, respectively

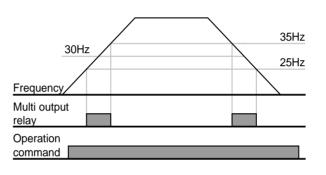

•3 : FDT-4


- Activated when run frequency meets the following condition.
- Active condition

Accel time: Run Frequency >= FDT Level

Decel time: Run Frequency > (FDT Level - FDT Bandwidth/2)

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P75	Detected frequency	-	0 ~ 200	30.0	Hz
	P76	Detected frequency bandwidth	-		10.0	

- Can not be set above max. frequency(P16).
 - When setting P75 and P76 to 30.0Hz and 10.0 Hz, respectively

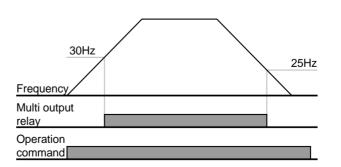

●4 : FDT-5

- Activated as B contact contrast to FDT-4.
- Active condition

Accel time: Run Frequency >= FDT Level


Decel time: Run Frequency > (FDT Level – FDT Bandwidth/2)

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P75	Detected frequency	-	0 ~ 200	30.0	Hz
	P76	Detected frequency bandwidth	-		10.0	


- Can not be set above max. frequency(P16).
 - When setting P75 and P76 to 30.0Hz and 10.0 Hz, respectively
- ●5 : Overload (OL)

• Refer to page 12-1.

- •6 : Inverter overload (IOL)
 - Refer to page 12-5
- •7 : Motor stall (Stall)
 - Refer to page 12-1
- 8 : Over voltage trip (Ovt)
 - Activated when over voltage trip occurs due to DC link voltage exceeded 400VDC.
- •9 : Low voltage trip (Lvt)
 - Activated when low voltage trip occurs due to DC link voltage under 200V.
- ●10 : Inverter heatsink overheat (OHt)
 - > Activated when the heatsink is overheated
- ●11 : Command loss
 - Activated when analogue or RS485 communication command are lost. Refer to page 12-4 frequency input loss.

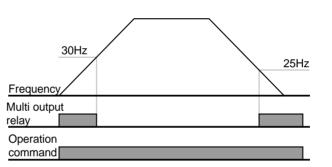


 - ●12 : During operation
 - Activated when run command is input and inverter outputs its voltage.




●13 : During stop

 Activated during stop without active command



●14 : During constant run

Activated during constant speed operation

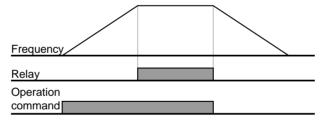

•15 : During speed searching

- ▶ Refer to page 10-12
- ●16 : Wait time for run signal input
 - This function becomes active during normal operation and that the inverter waits for active run command from external sequence.
- ●17 : Fault output
 - The parameter set in P78 is activated.
 - ▶ For example, if setting P77, P78 to 17 and 2, respectively, Multi-function output relay will become active when trip other than "Low voltage trip" occurred.

12. Protective Function

12.1 Overloa	ad Trip					
Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group P24		Overload trip select	1	0 ~ 1	0	
	P25	Overload trip level	-	30 ~ 200	180	%
	P26	Overload trip time	-	0 ~ 60	60	sec

- Set P24 of PG Group to 1.
- Cut the inverter's output in case of motor overload
- Cut the output if current is allowed to motor during overload trip time higher than the preset level.

12.2 Stall prevention


Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P27	Stall prevention select	-	0 ~ 7	3	
	P28	Stall prevention level	-	30 ~ 150	150	%
	P77	Multi-function relay select	7	0 ~ 18	17	

- During acceleration: Motor starts deceleration when current exceeding the value set in P28 flows
- During constant run: Motor decelerates when current exceeding the value set in P28 flows.
- During deceleration: Motor deceleration stops when inverter DC link voltage rises above a certain voltage level.
- □ P28: The value is set as the percent of motor rated current (P43).
- P77: Inverter outputs signals of stall prevention operation to externally connected device through multifunction relay output (30AC).

Set		Decel	Constant	Accel	Set		Decel	Constant	Accel
0		-	-	-	4	",,	\checkmark	-	-
1	•••	-	-	✓	5	•,•	\checkmark	-	✓
2	•••	-	✓	-	6	"	\checkmark	✓	-
3	•••	-	✓	✓	7	•••	\checkmark	✓	✓

> P27 : Stall prevention can be set as the table below

- For example, set P27 to 3 to make stall prevention active during Acceleration and constant run.
- When stall prevention is executed during acceleration or deceleration, Accel/Decel time may take longer than the user-setting time.
- When stall prevention is activated during constant run, t1, t2 executed in accordance with the value set in ACC - [Accel time] and dEC - [Decel time].
- i.e.) Stall prevention during operation

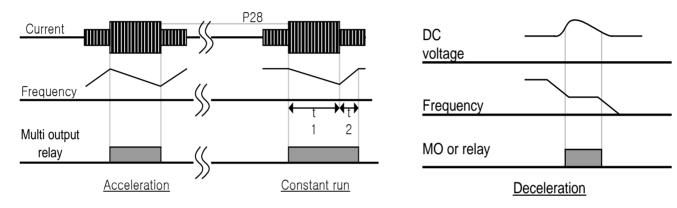

12.3 User's fault detection

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P33	User's fault detection	3	0 ~ 7	0	

- Can set the following fault detection.
- Ground fault detection during operation: it stops output if excessive current of one or more outputs flows due to ground fault and etc.
- □ Input phase loss: Inverter output is blocked at the event of more than one phase loss among R, S and T.
- Output phase loss: Inverter output is shut off at the event of more than one phase loss among U, V and W.


Set P43(Motor rated current) correctly. If the actual motor rated current and the value of P43 are different, output phase loss protection function could not be activated.

Dis	play	Ground fault during operation [GCt]	Input phase loss [COL]	Output phase loss [Pot]	Dis	play	Ground fault during operation [GCt]	Input phase loss [COL]	Output phase loss [Pot]
0		-	-	-	4	",,	\checkmark	-	-
1	••	-	-	✓	5	•••	\checkmark	-	\checkmark
2	•••	-	✓	-	6	"	✓	\checkmark	-
3	•••	-	✓	✓	7		✓	✓	✓

12.4 External trip signal

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P66	Multi-function input terminal P1 define		0 ~ 24	0	
	~	~				
	P69	Multi-function input terminal P4 define		3		
	P70	Multi-function input terminal P5 define	19		4	

- Select a terminal among P1 ~ P5 to output external trip signal.
- Set P69 and P70 to 18 and 19 to define P4 and P5 as External A contact and B contact.
 - External trip signal input A contact (N.O.): At normal status, P4 and CM terminals are open while at fault, inverter output is shut off.
 - External trip signal input B contact (N.C.): At normal status, P5 and CM terminals are open while at open, inverter output is shut off.

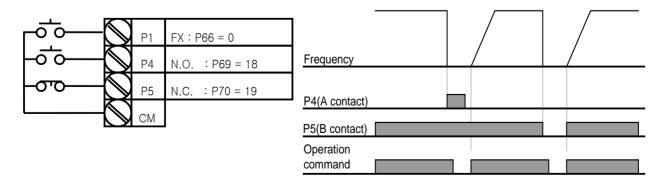

Group	Code	Parameter Name	Setting	Range	Initial	Unit
PG Group	P65	Criteria for analogue input signal	0	0 ~ 2	0	
	P81	Drive mode select after loss of frequency command	-	0~2	0	
	P82	Wait time after loss of frequency command	-	0.1~120	1.0	sec
	P77	Multi-function relay select	11	0 ~ 18	17	

12.5 Frequency command loss

- Select the Drive mode when frequency reference set via analog signal or communication option is lost.
 - ▶ P65 : Set the criteria for analog input signal loss.

P65	P65 Criteria for analogue input signal loss	0	Disabled
		1	When half the value set in P56 and P61 is entered
		2	When less than the value set in P56 and P61 is entered


- If frequency command is set to 3(V1 of terminal) in Frq code of Drive Group and P65 is set to 1 and when AI is less than half the value set in P56, it determines frequency command loss. At the moment, if entering current based on the value converting 0~10V to 0~100%, it operates with the value converting 0~20mA to 0~100%.
- i.e.) Voltage input: If P56 and P65 are set to 50% and 2 respectively, it operates at 5V.

Current input: If P56 and P65 are set to 50% and 1 respectively, it operates at 5mA.

> P81: When the conditions set in P65 are met for the time set in P82, the inverter operates as follows.

P81	Drive mode select after	0	Continuous operation with the frequency before
	loss of frequency	0	command loss occurs
	command	1	Free run stop (output cut off)
		2	Decel to stop


P77: Multi-function relay output (30AC) is used to output information on loss of frequency command to external sequence. i.e.) when P65 is set to 2, P81 to 2, P82 to 5.0 sec and P77 to 11, respectively,

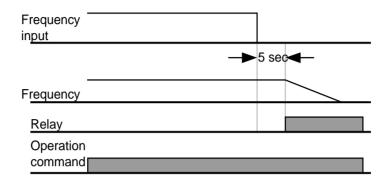

12.6 Inverter overload

Group	Code	Parameter Name		Setting	Range	Initial	Unit
PG Group	P77	Multi-function output select	terminal	6	0 ~ 17	17	

- Inverter overload prevention function is activated when the current above inverter rated current flows. At the moment, the operation time becomes shorter as larger output current is.
- Multi-function relay (30BC) is used to output it to external device during inverter overload trip.
- Inverter overload trip operates as follows. However, level and time may vary automatically in accordance with motor type, depending on settings including carrier frequency.

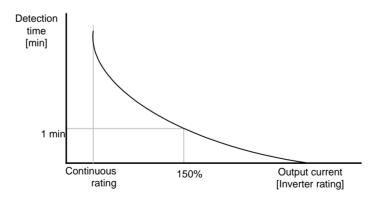

ΜΕΜΟ

٦

13. Troubleshooting and Maintenance

13.1 Protective Functions

When a fault occurs, the cause must be corrected before the fault can be cleared. If protective function keeps active, the inverter should restart after clearing the cause(s). Or, it may lead to reduction in product life and damage to the equipment.

 $/! \$

Caution

• Protection of Inverter output current and input voltage

Fault display	Protective function	Description
	Overcurrent	The inverter turns off its output when the output current of the inverter flows more than 200% of the inverter rated current
	Ground fault current	The inverter turns off its output when a ground fault occurs on the output as long as the function is active.
	Ground fault current	The inverter turns off its output when unbalanced output current occurs due to abnormal situation such as ground fault during run and one of U,V,W gets overcurrent.
	Inverter Overload	The inverter turns off its output when the output current of the inverter flows more than the rated level (150% for 1 minute).
	Overload trip	The inverter turns off its output if the output current of the inverter more than the motor rated current(P25) flows.
	Inverter overheat	The inverter turns off its output if the heat sink overheats due to a damaged cooling fan.
	Condenser overload	Inverter output is blocked when one of 3 phases gets opened or main condenser is outworn, resulting in excessive DC voltage variation. Detection time varies depending on inverter output current.
Püt	Output Phase loss	The inverter turns off its output when the one or more of the output (U, V, W) phase is open. The inverter detects the output current to check the phase loss of the output.
	Over voltage	The inverter turns off its output if the DC voltage of the main circuit increases higher than 400 V when the motor decelerates. This fault can also occur due to a surge voltage generated at the power supply system.
1	Low voltage	The inverter turns off its output if the DC voltage is below 180V because of insufficient voltage input torque.

• Protection of abnormal internal circuit and external signal

Fault display	Protective function	Description
EEP	Parameter save error	Displayed when user-setting parameters fail to be entered into memory.
H'''	Inverter hardware fault	Displayed when an error occurs in CPU operation and internal OS program. The fault may not be relieved simply by STOP/RST key of the loader or reset terminal. Retry after completely turning off the inverter and the display of the loader is fully disappeared.
E5 E	Instant cut off	Used for the emergency stop of the inverter. The inverter instantly turns off the output when the EST terminal is turned on. Note The inverter starts to regular operation when turning off the EST terminal while FX or RX terminal is ON.
EF 8	External fault A contact input	When multi-function input terminal (P66~P70) is set to 18, external fault signal input: A (Normal Open Contact), the inverter turns off the output.
EFP	External fault B contact input	When multi-function input terminal (P66 ~ P70) is set to 19, external fault signal input: B (Normal Close Contact), the inverter turns off the output.
!	When the frequency command is lost	When inverter operation is set via Analog input (0-10V or 0-20mA input) or option (RS485) and no signal is applied, operation is done according to the method set in P81.

13.2 Fault Remedy

\triangle Caution

If any trouble occurs due to overcurrent, make sure to restart after eliminating the causes because power semiconductor element inside the inverter may be broken.

Protective function	Cause	Remedy
	 Accel/Decel time is too short compared to the inertia of the load(GD²). 	Increase the Accel/Decel time.
Overcurrent	 Load is greater than the inverter rating. Inverter output is issued when the motor is free running. Output short circuit or ground fault has 	 Replace the inverter with appropriate capacity. Resume operation after stopping the motor or use P36 (Speed search).
	occurred. ●Mechanical brake of the motor is operating too fast.	 Check output wiring. Check the mechanical brake.
	•Ground fault has occurred at the output wiring of the inverter.	Check the wiring of the output terminal.
	 The insulation of the motor is damaged due to heat. 	Replace the motor.
Ground fault current		
	Load is greater than the inverter rating.	Upgrade the capacity of motor and inverter or reduce the load weight.
Inverter overload	●Torque boost scale is set too large.	Reduce torque boost scale.
	Cooling system has faults.	Check for alien substances clogged in the heat sink.
Inverter overheat	Ambient temperature is too high.	☞ Keep ambient temperature under 40°C.
Condenser overload	3-Phase product may have one phase lost.Internal condenser was outworn.	 Check whether wiring of input power or inter-phase voltage is abnormal. It's almost time to replace or it may happen when it is used in hot temperature for a long while. Contact after-sales service.

•Fault Remedy

Protective function	Cause	Remedy
PC Output Phase loss	 Faulty contact of magnetic switch at output Faulty output wiring 	 Make connection of magnetic switch at output of the inverter securely. Check output wiring.
Over voltage	 Decel time is too short compared to the inertia of the load(GD²). Regenerative load is at the inverter output. Line voltage is too high. 	 Increase the Decel time. Check whether line voltage exceeds its rating.
Luc Low voltage	 Line voltage is low. Load larger than line capacity is connected to line (ex: welding machine, motor's direct input) Faulty magnetic switch at the input side of the inverter. 	 Check whether line voltage is below its rating. Check the incoming AC line. Adjust the line capacity corresponding to the load. Change a magnetic switch.
E E R External fault Acontact input E E B External fault Bcontact input	 The multi function terminals(P66 ~ P70) set to "18 (External fault- A)" or "19 (External trip signal input : fault-B)" in P66~P70 in PG Group is ON. 	Eliminate the cause of fault at circuit connected to external fault terminal or cause of external fault input.
/	 No frequency command is applied to AI terminal. Communication command is cuts off 	 Check the wiring of AI and frequency reference level. In case of a program set to periodically update frequency, check the communication line or operation of master device.
EEP Parameter save error	Hardware fault	 Contact your local LSIS sales representative. EEP message occurs when first allowing power after upgrading software due to A/S service. At the moment, turn it off and retry.

13.3 Precautions for maintenance

🗥 Warning

- Make sure to remove the input power while performing maintenance.
- Make sure to perform maintenance after checking the DC link capacitor has discharged. The bus capacitors in the inverter main circuit can still be charged even after the power is turned off. Check the voltage between terminal P or P1 and N using a tester before proceeding.
- □S V-iE5 series inverter has ESD (Electrostatic Discharge) sensitive components. Take protective measures against ESD before touching them for inspection or installation.
- Do not change any inner parts and connectors. Never modify the inverter.

13.4 Checklist

- Daily inspections
 - Proper installation environment
 - Cooling system fault
 - Unusual vibration and noise
 - Unusual overheating and discoloration
- Periodic inspection
 - > Do screws and bolts become loose or rust due to the environment?
 - Tighten or replace them.
 - Alien substances are clogged in the cooling system?
 - ☞Eliminate them by using compressed air.
 - Check the rotating condition of the cooling fan, the condition of capacitors and the connections with the magnetic contactor
 - @ Replace them if there are any abnormalities.

13.5 Parts Replacement

The inverter consists of many electronic parts such as semiconductor devices. The following parts may deteriorate with age because of their structures or physical characteristics, leading to reduced performance or failure of the inverter. For preventive maintenance, the parts must be changed periodically.

Part name	Change period(year)	Description
DC link condenser	4	Exchange
Control smoothing condenser	4	Exchange
Relay	-	Determined after inspection

ΜΕΜΟ	

14. COM Option (RS-485)

14.1 Introduction

SV-iE5 inverter can be controlled and monitored by the sequence program of the PLC or other master module. Drives or other slave devices may be connected in a multi-drop fashion on the RS-485 network and may be monitored or controlled by a single PLC or PC.

14.2 Specifications

Performance Specifications

Item	Specification
COM method	RS-485
Transmission form	Bus method, Multi drop Link System
Inverter	SV-iE5 series
Converter	RS232 converter
Connectable drives	Max. 16
Transmission distance	Max. 1,200m (within 700m recommended)

Hardware specification

Item	Specification
Installation	Use S+, S- terminals on control terminal block
Power supply	Use Insulated power from the inverter power supply


Communication specification

Item	Specification
Communication speed	9,600/4,800/2,400 bps selectable
Control procedure	Asynchronous communication system
COM system	Half duplex system
Character system	Binary
Stop bit length	1 bit / 2bit
CRC check	2 bytes
Parity check	None

14.3 Installation

•Connecting the communication line

Connect(wire) to the inverter's (S+), (S-) terminals of the control terminals as shown in the below figure. Use CM terminal on the lower control terminal for COM signal shield ground. COM dedicated terminal is delivered with iE5 COM optional product.

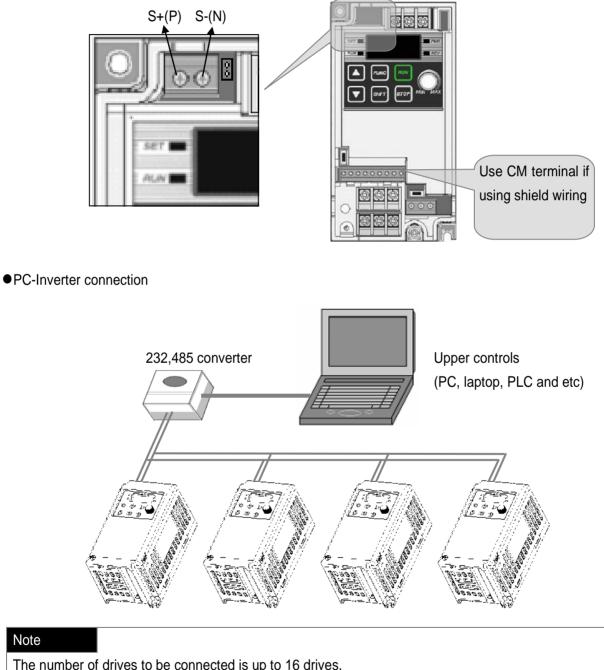

Note

The number of drives to be connected is up to 16 drives.

The specification of length of communication line is max. 1200m. To ensure stable communication, limit the length below 700m.

Short both(S+, S-) of JP1 pin located on the upper PBC of control terminal COM terminal.

• Cable Specification

If communicating by using RS-422 or RS-485 channel, the twisted pair cable for RS-422 should be used considering the communication distance and speed. The specifications of the recommended cable are as follows.

- Product : Low Capacitance Lan Interface Cable
- Spec. : 2P X 22AWG(D/0.254 TA)
- Manufacturer : LS cable
- Type : LIREV-AMESB

Even if using other cables but the above recommended cable, make sure to use cables conforming to the following table.

Characteristics

Electrical	Item		Unit	Characteristics	Test condition
characteristics	Conductor resistance		Ω/km	59 and lower	Ambient temp.
	Withstand v	oltage(DC)	V/1min	Endurable at 500V for 1 minute	In the air
	Insulation resistance		MΩ-km	1,000 and higher	Ambient temp.
	Electrostatio	c cap	Pf/M	45 and lower	1kHz
	Characteris	tic	Ω	120 ± 12	10MHz
	impedance				
Appearance	Conductor	Core	Pair	2	
characteristics		Spec.	AWG	22	
		Structure	NO./mm	1/0.643	
	Dia. insulator Thickness		Mm	0.643	
			mm	0.59	
		Dia.	Mm	1.94	

14.4 Inverter functional code setting

Once correctly connected, set COM parameters as follows. However, COM speed number should be set according to the system.

Function

Code	Function	Setting
drv	Run mode	3 (COM)
Frq	Frequency mode	4 (COM)
P 79	Inverter number	1 ~ 250 (set avoiding duplication)
P 80	COM speed	2 (9,600 bps, factory default)
P 81	Run mode when speed command is lost	0 (keep operating with the frequency set before
		command is lost)

P 82	Determination time when speed command is lost	1.0 second
P 83	COM waiting time	Set the waiting time until the next TX signal output
		after receiving RX signal.
P 84	Parity/STOP setting	Set COM parity/stop bit

14.5 Operation

Check whether a computer and an inverter are correctly connected.

Turn on the inverter. Do not connect any load to the inverter until it is confirmed that it would be communicated with a computer. Run the inverter in accordance with the inverter run program.

14.6 COM Protocol(ModBus-RTU)

Use ModBus-RTU protocol, which is open protocol. It is structured that computer or other host serves as a master while the inverter servers as a slave. The inverter, as a slave, responds to the read/write request of the master

• Supportable function codes

Function	Description	Remarks
h03	Read Hold Register	
h04	Read Input Register	
h06	Preset Single Register	
h10	Preset Multiple Register	

• Exception codes

Exception	Description	Remarks		
h01	ILLEGAL FUNCTION	When using other function codes but these supported by		
		the inverter (h03,h04,h06,h10)		
h02	ILLEGAL DATA ADDRESS	When parameter address is invalid (not exists)		
		If function code is h06 or h10(parameter writing command)		
h03	ILLEGAL DATA VALUE	or when parameter value is not valid (reading only or		
		beyond the range)		
h06	SLAVE DEVICE BUSY	Delay		
h14	Lloor dofino	1.Write Disable(Address h0004 value is 0)		
	User define	2.Read Only or Not Program during Running		

Note

Common S/W version is displayed in hexadecimal number while the S/W version of parameter is displayed in decimal number.

14.7 Parameter code list

Γ

•Common area: Area accessible regardless of inverter models.

Address	Parameter	Scale	Unit	R/W	Data value		
					0 : SV-iS3	7 : SV-iG5	
				R	1 : SV-iG	8 : SV-iC5	
h0000					2 : SV-iV	9 : SV-iP5	
	Inverter model	-	-		3 : SV-iH	A : SV-iG5A	
					4 : SV-iS5	D : SV-iE5	
					5 :SV-iV5		
h0001	Inverter capacity	-	-	R	FFFF:100W 0000:200W	0001:200W	
h0002	Inverter Input Voltage	-	-	R	0 : 220V class		
h0003	Version	-	-	R	i.e.) Version 1.0 : h0010		
h 000 4	Demonstration				0: Lock (default)		
h0004	Parameter Lock	-	-	R/W	1: Unlock		
h0005	Frequency Reference	0.01	Hz	R/W	Starting freq. ~ Max. freq.		
					BIT 0: Stop		
				R/W	BIT 1: Forward Run		
					BIT 2: Reverse Run		
				W	BIT 3: Fault Reset (RESET)		
					BIT 4: Emergency Stop (EST)		
				-	BIT 5, 13~15: Not Used		
					BIT 6~7:		
		_			00: terminal	01: loader	
h0006	Run Command				10: Reserved	11: Com operation	
10000	Turi command		-		BIT 8~12: frequency arrival info		
					00000: DRV-00	00001: multi-step 1	
				R	00010: multi-step 2	00011: multi-step 3	
					00100: UP	00101: Down	
					00110: Up/down zero	00111: AI input	
					01000: JOG /	01001~	
					Loader volume	10010: reserved	
					10011: Com operation	10100~	
						11111: reserved	
h0007	Acceleration Time	0.1	sec	R/W	See Function List		
h0008	Deceleration Time	0.1	sec	R/W	See Function List	h0008	

Address	Parameter	Scale	Unit	R/W	Data value	
h0009	Output Current	0.1	А	R	See Function List.	
H000A	Output Frequency	0.01	Hz	R	See Function List.	
H000B	Output Voltage	0.1	V	R	See Function List.	
H000C	DC Link voltage	0.1	V	R	See Function List.	
H000D	-	-	-	-	Reserved	
					BIT 0 : Stop	
					BIT 1 : Forward running	
					BIT 2 : Reverse running	
					BIT 3 : Fault (Trip)	
					BIT 4 : Accelerating	
					BIT 5 : Decelerating	
h000E	Status of Inverter			R	BIT 6 : speed arrival	
HOUDE	Status of Inventer				BIT 7 : DC Braking	
					BIT 8 : Stopping	
					BIT10 : Brake Open	
					BIT11 : Forward run command(1)	
					BIT12 : Reverse run command(1)	
					BIT13 : REM. R/S	
					BIT14 : REM. Freq.	
					BIT 0 : OCT	
					BIT 1 : OVT	
					BIT 2 : EXT-A	
					BIT 3 : EST(Emergency Stop)	
					BIT 4 : COL	
					BIT 5 : GFT(Ground Fault)	
					BIT 6 : OHT(Over Heat)	
h000F	Trip information			R	BIT 7 : GCT(Ground Current Trip)	
110001					BIT 8 : OLT(Overload trip)	
					BIT 9 : HW-Diag	
					BIT10: EXT-B	
					BIT11: EEP(Parameter Write Error)	
					BIT12: -	
					BIT13: PO(Phase Open)	
					BIT14 : IOLT	
					BIT15: LVT	

14-6 | LS Industrial Systems

Address	Parameter	Scale	Unit	R/W	Data value
					BIT 0 : P1
					BIT 1 : P2
h0010	Input terminal status			R	BIT 2 : P3
					BIT 3 : P4
					BIT 4 : P5
h0011	Output terminal status			R	BIT 0 ~6: Not Used
	Output terminal status				BIT 7 : 30AC
h0012	-	-	-	-	Reserved
h0013	-	-	-	-	Reserved
h0014	-	-	-	-	Reserved
h0015	RPM			R	See Function List.

Note

The changed value in Common area affects the current setting but returns to the previous setting when power is cycled or Inverter is reset. However, changing value is immediately reflected in other parameter groups even in the case of Reset or Power On/Off.

•DRV group

Address	Address		Codo Parametor		Max	Min
16bit	10bit	Code	Parameter	Initial	Max.	Min.
D100	53504	D00	Cmd. Freq	0	Max. Freq.	0
D101	53505	D01	ACC	50	60000	0
D102	53506	D02	DEC	100	60000	0
D103	53507	D03	DRV	1	3	0
D104	53508	D04	FRQ	0	4	0
D105	53509	D05	ST 1	1000	Max. Freq.	0
D106	53510	D06	ST 2	2000	Max. Freq.	0
D107	53511	D07	ST 3	3000	Max. Freq.	0
D108	53512	D08	CUR	-	255	-
D109	53513	D09	RPM	0	1800	0
D10A	53514	D10	DCL	0	65535	0
D10B	53515	D11	USR	0	1	0
D10C	53516	D12	FLT	0	1	0
D10D	53517	D13	DRC	0	1	0

PROGRAM group

Address		Qada	Devenuetor	lucitical	Maria	
16bit	10bit	Code	Parameter	Initial	Max.	Min.
D201	53761	P 1	Last Fault1	0	1	0
D202	53762	P 2	Last Fault2	0	1	0
D203	53763	P 3	Last Fault3	0	1	0
D204	53764	P 4	Fault Clear	0	1	0
D205	53765	P 5	Run Prohibit	0	2	0
D206	53766	P 6	ACC Pattern	0	1	0
D207	53767	Ρ7	DEC Pattern	0	1	0
D208	53768	P 8	Stop Method	0	2	0
D209	53769	P 9	DcBr freq	500	6000	startFreq
D20A	53770	P 10	DcBlk time	10	6000	0
D20B	53771	P 11	DcBr value	50	200	0
D20C	53772	P 12	DcBr time	10	600	0
D20D	53773	P 13	DcSt value	50	200	0
D20E	53774	P 14	DcSt time	0	600	0
D20F	53775	P 15	Jog Freq	1000	Max. Freq.	0
D210	53776	P 16	Max Freq	6000	12000	4000
D211	53777	P 17	Base Freq	6000	12000	3000
D212	53778	P 18	Start Freq	50	1000	10
D213	53779	P 19	Trq Boost	0	1	0
D214	53780	P 20	Fwd Boost	50	150	0
D215	53781	P 21	Rev Boost	50	150	0
D216	53782	P 22	VF Pattern	0	1	0
D217	53783	P 23	OV adj	100	110	40
D218	53784	P 24	OLT select	0	1	0
D219	53785	P 25	OLT level	180	200	50
D21A	53786	P 26	OLT time	600	600	0
D21B	53787	P 27	Stall prev.	0	7	0
D21C	53788	P 28	Stall level	150	150	30
D21D	53789	P 29	Up/Down Save select	0	1	0
D21E	53790	P 30	Up/Down Save Freq.	0	Max. Freq.	0
D21F	53791	P 31	Dwell freq	500	Max. Freq.	startFreq
D220	53792	P 32	Dwell time	0	100	0

Address		Osala	Demonster	1	Maria	
16bit	10bit	Code	Parameter	Initial	Max.	Min.
D221	53793	P 33	Trip select	0	3	0
D222	53794	P 34	Power-on run	0	1	0
D223	53795	P 35	RST restart	0	1	0
D224	53796	P 36	Speed Search	0	50	0
D225	53797	P 37	SS Sup-Curr	100	200	80
D226	53798	P 38	Retry number	0	10	0
D227	53799	P 39	Retry delay	10	600	0
D228	53800	P 40	Motor select	0	2	0
D229	53801	P 41	Pole number	4	12	2
D22A	53802	P 42	Rated-Slip freq.	200	1000	0
D22B	53803	P 43	Rated-Curr	10	255	0
D22C	53804	P 44	Noload-Curr	5	255	0
D22D	53805	P 45	Carrier freq	30	100	10
D22E	53806	P 46	Control Mode	0	2	0
D22F	53807	P 47	PI P-gain	3000	9999	0
D230	53808	P 48	PI I-gain	100	3200	10
D232	53810	P 50	PI F-gain	0	9999	0
D233	53811	P 51	PI output freq. H limit	6000	Max. Freq.	PI output freq.L limit
D234	53812	P 52	PI output freq. L limit	50	PI output freq. H limit	startFreq.
D235	53813	P 53	PowerOn disp	0	15	0
D236	53814	P 54	Rpm disp Gain	100	1000	1
D237	53815	P 55	Al input filter cont	10	9999	0
D238	53816	P 56	AI min. Input(v/i)	0	AI max. inupt	0
D239	53817	P 57	AI min. input freq.	0	Max. Freq.	0
D23A	53818	P 58	AI max. Input(v/i)	1000	1000	AI min. input
D23B	53819	P 59	AI max. input freq.	6000	Max. Freq.	0
D23C	53820	P 60	Volume input filter cont	10	9999	0
D23D	53821	P 61	Volume min. input	0	Vol. max. input	0
D23E	53822	P 62	Volume input min. freq.	0	Max. Freq.	0
D23F	53823	P 63	Volume max. input	1000	1000	Vol. min. input
D240	53824	P 64	Volume input max. freq.	6000	Max. Freq.	0
D241	53825	P 65	Anal speed command lost criteria	0	2	0
D242	53826	P 66	P1 define	0	24	0

Γ

Address	Address		Domenter	la:t:al	Max	N/Lin
16bit	10bit	Code	Parameter	Initial	Max.	Min.
D243	53827	P 67	P2 define	1	24	0
D244	53828	P 68	P3 define	2	24	0
D245	53829	P 69	P4 define	3	24	0
D246	53830	P 70	P5 define	4	24	0
D247	53831	P 71	Input T/M status disp	0	31	0
D248	53832	P 72	MF input T/M filter cont.	3	20	1
D249	53833	P 73	Anal. Output item select	0	3	0
D24A	53834	P 74	Anal. Output level adj.	100	200	10
D24B	53835	P 75	Det. Freq.	3000	Max. Freq.	0
D24C	53836	P 76	Det. Freq. bandwidth	1000	Max. Freq.	0
D24D	53837	P 77	Relay func. select	17	17	0
D24E	53838	P 78	Fault output select.	2	7	0
D24F	53839	P 79	Inv No.	1	250	1
D250	53840	P 80	Baud rate	2	2	0
D251	53841	P 81	Lost command	0	2	0
D252	53842	P 82	Determination time of freq. input lost	10	1200	1
D253	53843	P 83	COM speed set	5	100	2
D254	53844	P 84	Parity/Stop Bit set	0	3	0
D255	53845	P 85	Para Init	0	2	0
D256	53846	P 86	Password set	0	FFFF	0
D257	53847	P 87	Para. Lock	0	65535	0
D258	53848	P 88	S/W Version	1	65535	0

1

14.8 Troubleshooting

Refer to Troubleshooting when RS 485 communication error occurs

• If communication is not connected

Check points	Corrective measures
Is the power provided to the converter?	Provide electric power to the converter.
Are the connections between converter and computer correct?	Refer to converter manual.
Does master start to communicate?	Start communication
Is baud rate of computer and inverter correctly set?	Set the correct value in accordance with "14.3 Installation".
¹⁾ Is the data format of user program right?	Revise User Program.
Is the connection between converter and communication	Check for GF the correct wiring in accordance
card right?	with "14.3 Installation"

¹⁾ User program refers to the embedded program for MCU or S/W programmed by a user.

ΜΕΜΟ	

٦

15. Specifications

15.1 Technical data

Input & output ratings

Type : SV xxx iE5 – x			001-1	002-1	004-1	001-2	002-2	004-2
¹⁾ Motor		[HP]	1/8	1/4	1/2	1/8	1/4	1/2
		[kW]	0.1	0.2	0.4	0.1	0.2	0.4
	²⁾ Capacity[kVA]		0.3	0.6	0.95	0.3	0.6	1.14
Output	Current [A]		0.8	1.4	2.5	0.8	1.6	3.0
ratings	Output frequency		0 ~ 200 [Hz]					
	Voltage [V]		³⁾ 3phase 200 ~ 230V					
	Voltage [V]		1phase 200 ~ 230 VAC (±10%) 3phase 200~230 VAC (±10%)					
Input ratings	Frequency		50 ~ 60 [Hz] (±5%)					
	Current[A]]	2.0	3.5	5.5	1.2	2.0	3.5

Control

Control method	v/f
Frequency setting resolution	Digital command : 0.01Hz Analog command : 0.1Hz (max. fre : 60Hz)
Frequency accuracy	Digital command: 0.01% of Max output frequency Analog command: 0.1% of Max output frequency
v/f pattern	Linear, Squared, v/f
Overload capacity	150% per min.
Torque boost	Manual/Auto torque boost

¹⁾ Motor shows the max. capacity assuming that 4 poles standard motor is used.

²⁾ Ratings are based on 220V.

³⁾ Max. output voltage may not be over the power voltage. Output voltage may be set temporarily lower than the power voltage.

Operation

Operation mode		Select one of loader/terminal/COM operation(optional)		
Frequency setting		Analogue: 0 ~ 10[V], 0 ~ 20[mA], loader volume		
Fleque	ancy setting	Digital: loader		
Operat	ion features	PID, up-down, 3-wire		
		NPN / PNP selectable(see pa	age 3-5)	
Input	Multi-function terminal P1, P2, P3, P4, P5	Multi-step Frequency-High &	Emergency stop, Fault reset, Jog operation, Low, Frequency UP/Down, 3-wire operation, nverter (v/f) operation bypass, Analog Hold,	
	Multi-function relay	Fault output and inverter status output	Less than (N.O., N.C.) AC250V 0.3A Less than DC 30V 1A	
	Analog output	0 ~ 10 Vdc (less than 10mA) : frequency, current, voltage, DC voltage selectable		

• Protective function

	Over Voltage, low voltage, over current, ground fault detection, inverter overload,					
Trip	overload trip, inverter overheat, condenser overload, output phase loss, overload					
	protection, frequency command loss, hardware fault.					
Alarm	Stall prevention					
Momontony power	Below 15 msec: Continuous operation (should be within rated input voltage, rated output					
Momentary power	power.)					
loss	Above 15 msec: Auto restart enable					

• Structure & Environment

Cooling	Natural cooling
Protection type	Open(IP 20)
Ambient temperature	-10°C ~ 40°C
Storage temperature	-20°C ~ 65°C
Ambient humidity	Less than 90% RH(no condensation)
Altitude, vibration	Below 1,000m, below 5.9m/sec ² (0.6G)
Environmental conditions	Protected from corrosive gas, combustible gas, oil mist or dust

WARRANTY

Maker	LS Industrial Systems Co.,Ltd		Installation(start- up) date	
Model No.	SV-iE5		Warranty period	
	Name			
Customer info	Address			
	Tel.			
	Name			
Sales office	Address			
	Tel.			

Note

This product has been manufactured through the strict QC control and inspection of LS Industrial Systems. Warranty period is 12 months after installation or 18 months after manufactured when the installation date is unidentified. However, the guarantee term may vary on the sales term.

In-warranty service information

If the defective part has been identified under normal and proper use within the guarantee term, contact your local authorized LS distributor or LS Service center.

Out-of-warranty service information

- > The guarantee will not apply in the following cases.
- Troubles are attributable to a user's intentional negligence or carelessness
- Damage was caused by abnormal voltage and peripheral devices' malfunction (failure)
- > Damage was caused by natural disasters(earthquake, fire, flooding, lightning and etc)
- When LS nameplate is not attached

Manual Revision History

No.	Revision	Changes	Version. No	Remarks
1	Sep. 2006	First edition	1.10	



LS Industrial System Co.,Ltd take the highest priority on sustainable management and do our best to preserve the environment of the earth.

Disposal Recommendation

LS Inverter is intended and designed to preserve the environment. To dispose of it, iron, aluminum, copper, and synthetic resin(product cover) may be separated and reused.